
Team3

Fetal Monitor

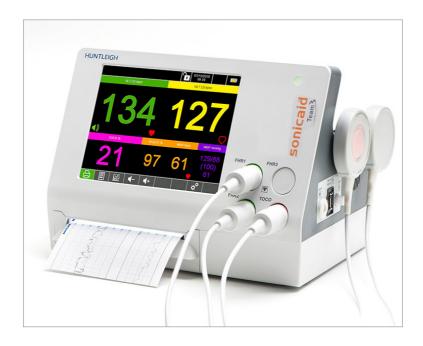



Team3 - English

Table of Contents

1.	Saf	ety	7
	1.1	Warnings	7
	1.2	Personal & Cybersecurity Information	8
		1.2.1 Personal Security Information	
		1.2.2 Interfaces & Connection to authorised external devices	
	1.3	Infection Control	
	1.4	Patient Applied Parts	10
	1.5	Service Life	10
2.	Intr	oduction	11
	2.1	Intended Use and Indications	12
	2.2	Clinical Benefit	12
	2.3	Contraindications	12
	2.4	Confirming Fetal Life Before Use	
	2.5	Unpacking / Preliminary Checks	
	:	2.5.1 Contents	
	2.6	Operator Positioning	13
3.	Pro	duct Identification	14
	3.1	Front Panel	
	3.2	Rear Panel	
	3.3	Base Panel Label	15
	3.4	Side Panel	
	3.5	Product Labelling	
4	Sati	up	40
4.		•	
	4.1	System Connection	
	4.2	Probe/Sensor/Cuff Connection	
	4.2	Loading Paper	
	4.3	Handling and Mounting	
		, ,	
5.	Оре	eration	20
	5.1	Switching the Unit ON	20
	5.2	Application Screen	20
		5.2.1 Patient database	
		5.2.2 Entering Patient Data	
		5.2.3 Lock / Unlock Screen	
		5.2.4 Date / Time	
	5.3		
		5.3.1 Print / Record	
	;	5.3.2 Paper Feed	24

	5.3.3	Numeric / Trace View	24
	5.3.4	•	
	5.3.5	•	
	5.3.6		
	5.3.7	Settings Menu	
	5.3.8	View Menu	32
	5.4 M	onitoring Parameters	35
	5.4.1	Numeric Format	36
	5.4.2	FHR Monitoring	37
	5.4.3		
	5.4.4	! 2	
	5.4.5		
	5.4.6		
	5.5 S	witching the Unit OFF	40
	5.6 A	uto Restart	40
	5.7 B	attery Charging	40
	5.7.1	The unit is switched OFF	40
	5.7.2	The unit is switched ON	40
6.		ring Fetal Parameters	
	6.1 P	reliminary	41
	6.2 U	Itrasound Monitoring	41
		alse recording of FHR	
		wins / Triplets Ultrasound Monitoring	
	6.4.1	· · · · · · · · · · · · · · · · · · ·	
		etal ECG (Team3l models only- using a Fetal ECG electrode)	
	0.5	etal 200 (realits) illouels offly- using a retal 200 electrode/	44
7.	Monito	ring Maternal Parameters	45
	7.1 C	ontractions (using TOCO transducer)	45
		ontractions (using IUP transducer)	
		etal Movement Event Marker	
	7.3 F		
	7.3.1		
	7.4 N 7.4.1	laternal ECG (MECG)	
		laternal Blood Pressure	
	7.5.1	Taking BP measurements	49
		•	
	7.6 M	aternal Oximetry	
		aternal Oximetry	
Q	7.6 M 7.6.1	Procedure	52
8.	7.6 M 7.6.1	Procedure	52 55
8.	7.6 M 7.6.1 Alarms 8.1 W	Procedure/hat is meant by an alarm	52 55
8.	7.6 M 7.6.1 Alarms 8.1 W 8.2 W	Internal Oximetry Procedure Internal Oximetry In	52 55 55
8.	7.6 M 7.6.1 Alarms 8.1 W 8.2 W	Procedure/hat is meant by an alarm	52 55 55
8.	7.6 M 7.6.1 Alarms 8.1 W 8.2 W 8.3 R	Internal Oximetry Procedure Internal Oximetry In	52555555
8.	7.6 M 7.6.1 Alarms 8.1 W 8.2 W 8.3 R 8.4 C	Internal Oximetry Procedure Internal Oximetry In	5255555555
	7.6 M 7.6.1 Alarms 8.1 W 8.2 W 8.3 R 8.4 C 8.5 N	Internal Oximetry Procedure Internal Oximetry Procedure Internal Oximetry Internal	
	7.6 M 7.6.1 Alarms 8.1 W 8.2 W 8.3 R 8.4 C 8.5 N	Internal Oximetry Procedure In the image of the image o	

	9.2	Paper options	57
	9.3	Paper care and handling	57
	9.4	Print speed and duration	57
	9.5	Changing paper packs	58
	9.6	Loading printer paper	58
	9.7	Using non-Sonicaid paper	59
	9.8	Sample Trace (Sonicaid paper)	59
	9.9		
	9.9	·	
	9.9	9.3 Stopping the printer while print timer running	61
10.	Sonic	caid Trend	62
	10.1	Introduction	62
	10.2	Sonicaid Trend	62
	10.3	Sonicaid Trend results	62
	10.4	Viewing Sonicaid Trend data	63
11	Dowe	s-Redman Antepartum Analysis	61
11.	11.1	Intended Use	
	11.1	Overview	
	11.3	The Dawes-Redman Criteria	
	11.4	Dawes-Redman Analysis	
	11.5	Using Dawes-Redman analysis	
	11.6	Dawes-Redman Analysis report	68
12.	Using	Team3 with a CRS System	70
	12.1	Connecting Team3 to Sonicaid FetalCare and Sonicaid Centrale	70
12	Trouk	ole Shooting	71
13.	13.1	FHR 71	/
	13.1	Oximetry	74
	13.2	Fetal event marker	
	13.4	Maternal blood pressure	
	13.4	Printing Printing	
	13.6	General	
14.	Care	and Cleaning	73
	14.1	General Care	73
	14.2	General Cleaning and Disinfecting	73
	14.3	Cleaning and Disinfecting Patient Applied Parts	73
	14.4	NIBP Cuff and Maternal Oximetry Sensor	74
	14.5	Transducer Belts	74
15	Main	tenance	75
10.	. wam 15.1	User maintenance	
	15.1 15.2	Technical maintenance	
	15.3	Corrective maintenance	/ 5

15.4	Servicing	76
15.5	Secure Settings	76
15.6	Customising Easinotes	84
16. Spe	cifications	85
16.1	Equipment Classification	85
16.2	General	85
16.3	Environmental	85
16.4	Transducers	86
16.5	Printer	89
16.6	Connections *	89
16.7	Display	90
16.8	Default Settings	
16.9	General Standards	92
17. Acc	essories	93
18. Warı	anty and Service	94
Append	ix 1 Electromagnetic Compatibility	95
Append	ix 2 End of Life Disposal	98
Append	ix 3 Manufacturer's Essential Performance Criteria Specification	99
Append	ix 4 Ultrasound Safety Considerations	101
Append	ix 5 Maternal SpO2 Additional Nellcor Clinical Information	103
Append	ix 6 Maternal SpO ₂ Additional Masimo Information	107
Append	ix 7 Sonicaid Wireless Telemetry	117
	ecting the Sonicaid Freedom telemetry unit	
	the telemetry unit	
Append	ix 8 Sonicaid Wireless Transducer System	118
	ecting the Sonicaid Wireless Transducer System	
	the Sonicaid wireless transducer system	
Endir	ng Monitoring	119
Append	ix 9 Additional Unimed Soft Tip U4105-06 Information	120

1. Safety



- We recommend that exposure to ultrasound should be kept As Low As Reasonably Achievable - (ALARA guidelines). This is considered to be good practice and should be observed at all times.
- Team3 provides just one indicator of fetal condition. This should be assessed as part of
 an holistic approach to obstetric care together with other factors. A complete
 assessment must be made before taking appropriate action. If there is any doubt
 concerning the accuracy of any measurement, an alternative method should be used.

Symbols



General Warning



Refer to Instructions for Use



Attention, consult accompanying documents / Instructions for Use

1.1 Warnings



- Do not use in the presence of flammable gases or in oxygen rich environments.
- Do not sterilise the product or its accessories. The product will be damaged, and there is a risk of patient and user harm.
- Keep dry, do not immerse Team3 in liquid. Ultrasound and Toco transducers are IPX7 rated. Team3 with wired transducers is not intended for use in water birth situations.
- Always fit Protective cover to protect against fluid ingress when moving Team3 by hand or on a trolley.
- Do not use in the sterile field unless additional barrier precautions are taken.
- · Use only recommended accessories listed in this manual.
- · Do not dispose of batteries in fire as this can cause them to explode.
- The optional Lithium battery pack is a service replaceable item. Replacement by inadequately trained personnel could result in a hazard.
- Do not use with defibrillators. Ensure that all Team3 leads and applied parts are removed from the patient before applying Defibrillation.
- Team3 series monitors are not intended for use with patients fitted with cardiac pacemakers.
- Do not use with electrosurgical devices.
- Team3 can be isolated from the AC mains supply by removing the IEC mains inlet connector. Ensure that this is fully accessible at all times.
- Team3 is a Class 1 product that relies for safety on its protective earth. Ensure it is connected to a suitably earthed AC mains supply.
- Do not use in the home environment.
- Do not use the Team3 in vehicles or in aircraft.
- If this product is connected to another item of electrical equipment, ensure that the system is fully compliant with IEC60601-1.
- This product contains sensitive electronics, therefore, strong radio frequency fields could possibly interfere with it. This may be indicated by unusual sounds from the loudspeaker. We recommend that the source of interference is identified and eliminated.
- · Do not expose to excessive heat, including prolonged exposure to sunlight.
- · This equipment must not be modified.
- This equipment is for use only by suitably qualified healthcare practitioners.
- When configuring the system, consider and minimise the risk of persons tripping over cables.



- Do not use during magnetic resonance imaging (MRI) scanning.
- Do not use if there is any damage to the unit or its accessories.
- The use of the Team3 is restricted to one patient at a time.
- As with all medical equipment, carefully route patient cabling to reduce the possibility of
 patient entanglement or strangulation.
- Do not place the fetal monitor or accessories in any position that might cause it to fall on the patient.
- To ensure safety, avoid stacking multiple devices or placing anything on the device during operation.
- Do not start or operate the fetal monitor unless the setup was verified to be correct.
- · Avoid placing the device on surfaces with visible liquid spills.
- · Do not place the fetal monitor where the controls can be changed by the patient.
- Do not loop the patient cabling into a tight coil or wrap around the device, as this can damage the patient cabling.
- The risk of cyber attack on the fetal monitor is negligible. Refer to section 1.2 Personal Cybersecurity Information below.
- Monitoring MECG allows a check to be made that the fetal heart rate being recorded does in fact belong to the fetus and not the mother. MECG is not provided as a diagnostic ECG function.
- The emissions characteristics of this equipment make it suitable for use in individual
 areas and hospitals (CISPR 11 Class A). If it is used in a residential environment, (for
 which CISRR 11 Class B is normally required), this equipment might not offer adequate
 protection to radio-frequency communication services. The user might need to take
 mitigation measures, such as re-locating or re-orienting the equipment.
- When monitoring the fetal heart rate using an external ultrasound transducer, the
 fetal heart rate may sometimes be falsely reported. This is characteristic of ultrasound
 monitoring and can have a number of causes, including inadvertent monitoring of the
 maternal heartrate or signal artefact (see section 6.3).

1.2 Personal & Cybersecurity Information

1.2.1 Personal Security Information

The Team3 Fetal Monitor operates in an environment where personal and sensitive data is available. Whilst the system offers various levels of access, it is the responsibility of the institution to develop and implement comprehensive security strategies to comply with local regulations and to protect the information and systems from internal and external security threats.

To ensure the patients' safety and protect their personal health information, the user should implement practices or measures that include:

- Physical safeguards Security measures to ensure that unauthorised personnel do not have access to the monitor.
- Operational safeguards Security measures during operation.
- Administrative safeguards Security measures in management.
- The device should be used in isolation and not connected to any external system.
- If an external connection is deemed necessary, the host system should follow the security requirements of the HCP IT administrators and local policy and should include:
 - Protected from unmanaged network traffic by way of a correctly configured firewall
 - ♦ The use of an up to date Anti-Virus software
 - Up-to-date operating system
- Patient data HCPs should be made aware that the transfer of data from the Team3 to any generic PC, laptop or system and the subsequent annotation of such data with patient identifiable information such as hospital number, name, data of birth etc. will require that the data is encrypted at the time of annotation, a separate encryption method will also be required for transmission of said data.



CAUTION:

- The operation of the monitor shall be restricted to authorised personnel only. Assign
 only staff with a specific role the right to use the monitor.
- Protect patients' sensitive information while using the monitor in public places. For information displayed on the monitor or saved in the monitor, please pay attention to personal information protection.
- In use, to prevent unauthorised interaction with the monitor, it is recommended that the screen is locked should the monitor be left unattended for any prolonged period. Refer to the IFU for instructions on how to lock the display screen.
- It is recommended that default passwords referenced in the IFU are changed from time to by authorised personnel to reduce the risk of unauthorised access.
- Protect all the passwords for prevention of unauthorised changes to the monitors, and to protect unauthorised access to patient records

1.2.2 Interfaces & Connection to authorised external devices

Ensure that the monitor is connected only to devices authorised/approved by Huntleigh Healthcare. Users should operate all Huntleigh deployed and supported monitors within Huntleigh authorized specifications. (Refer to the Fetal monitor rear panel illustration in section 3.2 for details of the location of the following connectors):

(9) RJ45 Connector

The RJ45 connector is not functional. It is not intended for connection to hospital networks or any external equipment.

(8) USB Connector x 2

The USB connector is provided to facilitate the export of patient records from the monitor's internal memory to a USB flash drive. Access to patient records and the export facility is restricted to authorized personnel only and is password protected.

Note: Anti-virus measures such as USB device virus scanning should be carried out prior to using any recommended USB flash drive.

(4) RS232/CRS

The RS232/CRS connector allows connectivity to an external Central Record System as described in Section 11. It streams CTG data in RS232 serial format utilising a HP50 protocol.

No patient data is transmitted by the Fetal Monitor through this connection.

(5) Wireless Telemetry

The Wireless Telemetry connector supports connectivity to the Sonicaid Telemetry unit. Analogue waveforms and digital data is streamed from the wireless system to the Fetal Monitor via a bespoke cable assembly. This port provides data input only.

(6) DVI Socket (Where fitted)

The DVI Socket provides both digital and analogue video signals. A DVI cable is required if connection to an external display is required.

1.3 Infection Control

Single use transducer belts are for single patient use only and must not be re-used. For other single use accessories refer to the user instructions supplied with them.

1.4 Patient Applied Parts

As defined in IEC60601-1, the patient applied parts of the Team3 Fetal Monitor are the:

- TOCO Transducer
 MECG Electrodes
 NIBP Cuff
 Ultrasound Transducer
 Fetal ECG Electrodes
 MSpO, Sensor
- Patient Event Marker
 FECG leg plate lead
 FECG reference electrode pad

1.5 Service Life

This has been defined as the minimum time period during which the device is expected to remain safe and suitable to meet its intended use, and all risk control measures remain effective.

Huntleigh Healthcare Ltd's commitment is that the expected service life for this Device has been defined as 7 years.

2. Introduction

The Team3 series of fetal/maternal monitors are intended for antepartum (Team3A) and intrapartum use (Team3I).

The following features are standard on all models (Team3A and Team3I):

- Dual channel ultrasound fetal heart rate detection with audio.
- · External monitoring of maternal contractions
- · Maternally sensed fetal movements
- Automatic detection of fetal movement
- Colour 8.4" touchscreen display
- Connections to Central Record System via serial port
- Connection to Sonicaid wireless telemetry
- · USB for upgrading and configuration

The following options are available for all models:

- Dawes-Redman Analysis *
- Triplets
- eCTG models (No printer)
- Integral rechargeable battery
- DVI video output
- Paper tray insert for pre-printed paper
- Maternal Non-Invasive Blood Pressure
- Maternal pulse oximetry (MSpO₂)
- Maternal pulse rate (MPR) derived from MSpO2 or NiBP

Team3I has in addition the following as standard:

- Fetal ECG (FECG) **
- Maternal ECG (MECG) ***
- Intra-uterine pressure ***

Team3I additional options:

Labour Trend function *

Note: This IFU relates to software; v21.

* Not available in all markets ** Electrodes/sensors supplied separately *** Interface cables and Electrodes/sensors supplied separately

2.1 Intended Use and Indications

The Team3 fetal monitors are indicated for use by trained healthcare professionals in non-invasive and invasive monitoring of physiological parameters in pregnant women and fetuses, during the intrapartum and antepartum periods of pregnancy. The devices are intended for use in clinical and hospital-type facilities.

Monitoring using ultrasound is recommended from the 26th week of gestation for routine fetal monitoring.

Sonicaid Team3 Antepartum is suitable for use when there is a need to monitor the following physiological applications:

- Single, twin or triplet fetal heart rates by means of ultrasound
- · Uterine activity externally sensed
- Fetal movement maternally sensed and externally via ultrasound.
- Maternal pulse rate (MPR) and oxygen saturation via pulse oximetry
- Maternal non-invasive blood pressure.

Sonicaid Team3 Intrapartum is suitable for use when there is a need to monitor the following physiological applications:

- Single, twin or triplet fetal heart rates by means of ultrasound and/or FECG
- Maternal heart rate via ECG electrodes
- Uterine activity externally or internally sensed
- Fetal movement maternally sensed and externally via ultrasound
- Maternal pulse rate (MPR) and oxygen saturation via pulse oximetry
- Maternal non-invasive blood pressure.

2.2 Clinical Benefit

Provides the healthcare practitioner with valuable data for the assessment of fetal well-being.

2.3 Contraindications

This device is contraindicated for patients fitted with pacemakers.

The Team3 system is not intended for use in intensive care units, operating rooms or in transport monitoring applications.

2.4 Confirming Fetal Life Before Use

Fetal heart rate detection by the monitor may not always indicate that the fetus is alive. Confirm fetal life prior to monitoring, by measuring the fetal heart rate through auscultation, using a Pinard stethoscope or Doppler ultrasound device, and palpate the maternal pulse to ensure that the fetus is the signal source for the recorded heart rate.

2.5 Unpacking / Preliminary Checks

We recommend that a thorough visual inspection is made immediately the unit is received. Should any damage be evident or any parts missing, ensure that Huntleigh Healthcare Ltd is informed at once.

2.5.1 Contents

Standard - All models

Item	Item	Item
1 x Team3	1 x Ultrasound Transducer	1 x Toco transducer
1 x Event marker	1 x Pack of standard paper*	1 x 250ml Ultrasound Gel
Quick Start Guide	1 x Instructions for Use	2 x Transducer belt
1 x Power Cord		

^{*} except where Philips/GE paper insert option installed

Blood Pressure Option

Item	Item	Item
1 x Medium Cuff	1 x Large Cuff	1 x Connecting Hose

MSpO₂ Option

Item	Item
1 x Interface lead	1 x Finger sensor (type depends on option selected with order)

Standard - Team3I

Item
1 x FECG lead (type depends on option selected with order)

Note

All Team3 models are twins capable as standard but are supplied with 1x US transducer. For twins, or triplets if this option is installed, order extra US transducers separately as required.


2.6 Operator Positioning

Team3 can be comfortably operated from a standing or seated position in front of the unit.

3. Product Identification




Safety and performance are only assured when used in conjunction with the correct types of transducer. Do not attempt to connect any devices via these sockets other than those supplied or recommended by Huntleigh.

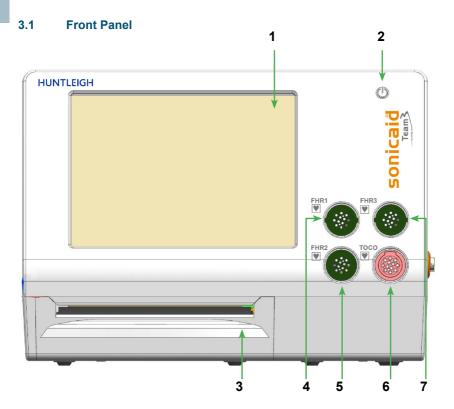

1	Touchscreen	5	FHR2 US/FECG socket
2	On/Off Button	6	TOCO Transducer socket
3	Printer *	7	FHR3 US/FECG socket *
4	FHR1 US/FECG socket		

^{*} Depending on model/options purchased.

3.2 Rear Panel

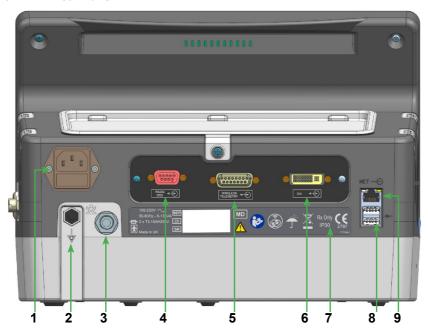

1	Mains Socket	6	DVI Socket *
2	Equipotential earth point	7	Rating Label
3	Fetal Event Marker Socket	8	USB Port x 2
4	RS232/CRS Socket	9	Ethernet Port **
5	Wireless Telemetry Socket		


^{*} Depending on model/options purchased.

** Not enabled - future upgrade.

3.3 Base Panel Label



3.4 Side Panel

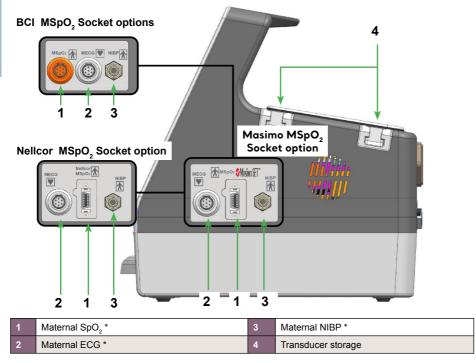

^{*} Depending on model/options purchased.

3.5 Product Labelling

Note:	Product labelling should be read from a distance no greater than 0.5m.	
•	Applied parts (Ultrasound Probes / TOCO/ FECG/ MECG) are type CF Applied parts (Maternal NIBP/MSpO ₂ /fetal event marker) are type BF	
	This symbol signifies that this product, including its accessories and consumables is subject to the WEEE (Waste Electrical and Electronic Equipment) regulations and should be disposed of responsibly in accordance with local procedures.	
c UL US	MEDICAL — PATIENT-MONITORING EQUIPMENT AS TO ELECTRICAL SHOCK, FIRE AND MECHANICAL HAZARDS ONLY IN ACCORDANCE WITH ANSI/AAMI ES60601-1, CAN/CSA C22.2 No. 60601-1:14, IEC 60601-1-6, CAN/CSA-C22.2 No. 60601-1-6, IEC 60601-1-8 CAN/CSA-C22.2 No. 60601-1-8, IEC 80601-2-30, CAN/CSA-C22.2 No. 80601-2-30, IEC 60601-2-37, CAN/CSA-C22.2 No. 80601-2-61, IEC 80601-2-49, ISO 80601-2-61	
(€ 2797	This symbol signifies that this product complies with the essential requirements of the Medical Device Directive (93/42/EEC) - Medical Device Regulation (EU/2017/745)	

Huntleigh Healthcare Ltd.

Manufactured By:

35 Portmanmoor Road, Cardiff, CF24 5HN, United Kingdom T: +44 (0)29 20485885 sales@huntleigh-diagnostics.co.uk www.huntleigh-diagnostics.com

444	
	ŀ

Legal Manufacturer in association with the CE mark in Europe ArjoHuntleigh AB

	Hans Michelsensgatan 10 211 20 Mal	mö, Sweden	1
<u></u>	Warning		Attention, consult accompanying documents / Instructions for Use
~	Alternating current (AC)	O	On/Standby
DI	Device Identifier	MD	Medical Device
SN	Serial Number	REF	Reference Number
Ţ	Protective Earth	~~ <u></u>	Date of Manufacture
*	Keep Dry	*	Do not use hook
T	Fragile	23	Cardboard packaging can be recycled.
-10°C -40°C	Temperature Limitations	<u>%</u>	Limits of Relative Humidity
X	Does not contain PVC	SATER	Not made with natural rubber latex.
YYYY-MM	Use By	2	Do Not Reuse
\$	Fetal Event Marker	$\stackrel{\triangle}{\uparrow}$	Equipotential Earth
∳• •	Limits of Atmospheric Pressure	IP30	Protected against ingress of solid foreign objects >2.5mm diameter. Not protected against ingress of water.
•	USB Port	→ NET	Ethernet Port
©	RoHS Compliant (RoHS - Restriction of Hazardous Substances)	4	Max stack x 4 identical boxes
	This side up		Wireless Telemetry Ready

4. Setup

4.1 System Connection



WARNING: These requirements must be met when a Team3 is connected to any other electrical equipment, such as a PC.

- 1 Non-medical equipment must comply with the relevant IEC or ISO safety standard. For Information Technology equipment, this standard is IEC950/ EN60950.
- 2 Anyone who connects additional equipment to signal input or signal output parts of the system is configuring a medical system, and is therefore responsible for ensuring that the system complies with the requirements of IEC60601-1. If there is any doubt as to whether your system complies, consult the technical service department or your local Huntleigh representative.
- 3 If non-medical equipment (e.g. the PC or printer) with enclosure leakage currents greater than those allowed by IEC60601-1 is to be used in the patient environment (within 1.5m of the patient), the enclosure leakage currents must be brought within the limits laid down by IEC60601-1. This may be achieved by using a medical grade isolating transformer. Suitable types are available via Huntleigh sales agents.
- 4 An Equipotential earth point is provided on the rear of the monitor for connection to a recommended earth point at the installation. The earth wire should be run separately from any mains or current carrying cables and should be kept as short as possible. Connection is achieved using a DIN 42801 type female terminal terminated onto 4mm2 56/28AWG yellow and green earth wire, connected to the Equipotential Earth Point at the installation. At no point should a patient be connected directly to Earth. All external earth connections should be visually inspected to ensure that all cables and connections are of good condition. Earth bonding checks should be carried out with a suitable portable appliance tester. The Impedance between the protective earth and Equipotential earth at the installation shall not exceed 0.1Ω.

4.1.1 DVI output (option)

The DVI output allows an external display monitor (must support 800x600 resolution) to be connected to Team3 using a standard DVI cable. Additionally, if the external display is a touch screen, a second cable from the display can be plugged into one of the USB ports. This allows Team3 to be controlled from the external display monitor. The integral screen remains active in this mode as a display but the touch function is disabled.

The external display monitor must either be medical grade, or additional electrical isolation measures must be taken to ensure that the system complies with the relevant electrical / safety standards.

4.2 Probe/Sensor/Cuff Connection

Ensure all probe/sensor leads are fully inserted into the appropriate socket.



Do not remove any cables by pulling on the lead.

4.3 Loading Paper

Refer to Section 9.6 - Loading Printer Paper.

4.4 Handling and Mounting

Trolley

If the unit is moved regularly, for maximum safety it is recommended that it is mounted on the purpose-designed trolley, which is available as an accessory. Follow the instructions provided with the trolley regarding assembly and proper mounting of the Team3.



- If the Team3 is being used on a trolley, make sure the trolley brakes are applied, except when the trolley is being moved.
- · Team3 should not be used whilst being moved between locations.
- Take care to ensure that trailing transducer cables and other connecting leads do not present trip hazards that could lead to the equipment falling. Always store unused transducers correctly.
- Do not attempt to move the trolley, or use the Team3, without ensuring that the unit and all transducers and cables are secured.
- Keep hands clear of the trolley wheels while the trolley is in motion. Do not attempt to free trapped cables without stopping the trolley and applying the brakes.
- When moving Team3, either by hand or when trolley mounted, the protective cover with a minimum of IPX2 should be fitted to prevent ingress of fluids which may be encountered during transit. A suitable cover is available as an accessory.

Wall bracket

If the unit is seldom moved, a purpose-designed bracket is available as an accessory to allow the Team3 to be wall mounted with maximum safety. Follow the instructions provided with the bracket regarding assembly and proper mounting of the Team3.



- Brackets must be installed by trained personnel using fixings appropriate for the wall construction and load. Carry out load tests before use.
- Ensure that the Team3 is securely fitted to the bracket using the correct adaptor plate and screws as described in the instructions supplied with the bracket.
- Choose the location carefully to prevent possibility of users, patients or passers-by striking the unit, causing injury.

5. Operation

5.1 Switching the Unit ON

If the DVI option is installed and an external touchscreen is connected, the external screen must be powered on before either applying mains power to Team3, or turning it on.

In this mode, all references to the touchscreen control of Team3 in this manual refer to the external touchscreen. The touch function of the integral screen is disabled in this mode.

Connect the monitor to the local mains supply. The unit will automatically power up.


If the unit is in off/standby mode with power already applied, touch and hold of for approximately 2 seconds to switch on. A short tone will be heard.

The unit will briefly display a splash screen, then continue to the Application Screen.

5.2 Application Screen

The application screen will be displayed and automatically configured according to the options / modules fitted to the unit. The screen is arranged into a series of waveforms and numerical indicators. All functions are accessed via the touchscreen, either through the Control Bar Menus located across the bottom of the screen or by touching each application.

Note that some applications require you to touch and hold on the relevant area.

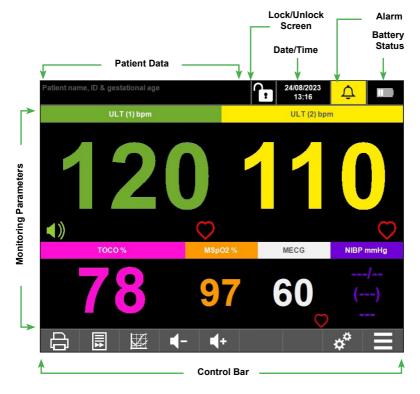

5.2.1 Patient database

The Team3 is not an archiving system. The patient database is intended for short term trace storage and review only. For long term storage, it is recommended that our Sonicaid FetalCare or Sonicaid Centrale CTG viewing and archiving system is used.

Data stored on the Team3 can be exported using the export facility within the Recordings Manager to move selected traces from the Team3 onto a USB drive.

The operator can search for, and view a previously stored trace in the View menu. Refer to section 5.3.8 for full details.

Traces are automatically stored to the Team3 database whenever a trace is printed or recorded. Note that traces viewed on screen before starting the printer or the recording are NOT saved.


There is an upper limit of 200 stored live recordings after which time, the Team3 will automatically delete the oldest recording.

5.2.2 Entering Patient Data

Touch and hold the Patient Data region in the top left corner of the screen to enter the Patient Data screen.

Note: If you cannot access the Patient Data screen, this function may be disabled - refer to section 15.5 for details.

This screen allows the operator to enter the patient's name, ID number, navigate to the 'Set Gestational Age' screen and search for previous patients.

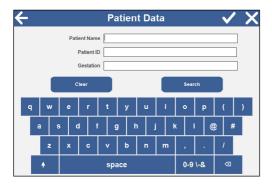

Enter Patient Name and Patient ID using the on-screen keyboard.

Touch to remove any details from the form.

Touch to view the Search screen which allows the operator to select the Patient Data of a mother who has been previously monitored.


Note: To search for patient records stored in the fetal monitor, enter passcode 9 8 7 6 5 after touching Search.

Touch the 'Gestation' box to enter the 'Set Gestational Age' screen.

Touch 🖊 to return to the Monitoring screen with the details on this form.

Searching for Patient Names



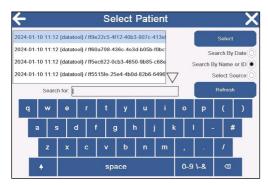

The operator can search for a patient either by date, Patient Name / ID or from an external USB device.

(The Select source option will only appear if there is a USB device inserted.)


Touch to check if any USB devices with exported recordings are connected.

Touch the patient required and touch

to return to the Monitoring screen with the details of this patient in the Patient Data region.

Setting Gestational Age

Gestation

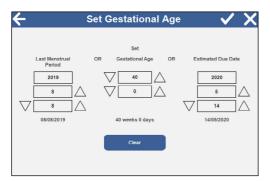

The Set Gestation dialogue allows the operator to change any one of:

- Last menstrual period date
- Gestational age
- · Estimated due date

Based on the current date, changing any one of these will automatically update the other two.


Touch any up or down arrow icon to change the values. The maximum value of gestation age is set at 44 weeks.

Touch to return to the Patient Data screen with the current value of gestational age.

Touch to reset the GA values to zero.


Touch V to return to the Patient Data screen with a cleared value of gestational age.

5.2.3 Lock / Unlock Screen

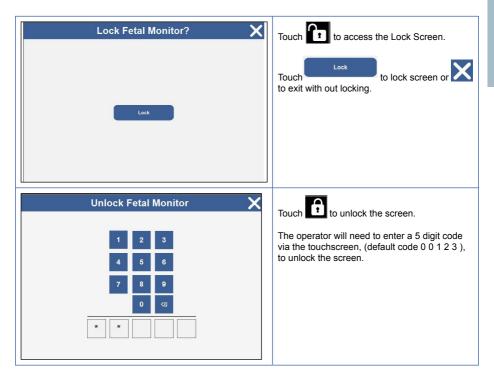


5.2.4 Date / Time

Touch and hold the Date/Time area of the screen to enter the Data and Time screen. (Note: This screen can also be accessed via the Settings Menu.)

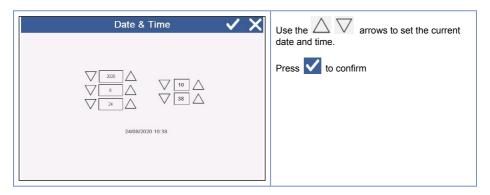

5.3 Control Bar

Displayed along the bottom of the screen is the control bar. Functions depend on the options / modules installed and the operating mode of the unit.

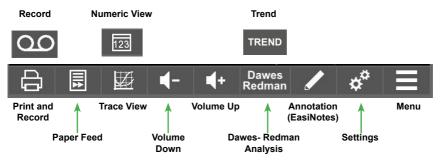

5.3.1 Print / Record

See Section 9 - Printing for details.

₽ ∞	Touch to print or record.*
9 00	Indicates printing or recording is active. Touch to cancel printing or recording. All printed data is also recorded. The recorded data can be reviewed when required.
	Annotation Icon appears in the control bar when printing or recording is active. (See Annotation - below).


* on eCTG models with no printer.

5.3.2 Paper Feed


Touch and hold to feed the paper through printer.*	ne paper through printer.*
--	----------------------------

* If option(s) installed.

5.3.3 Numeric / Trace View

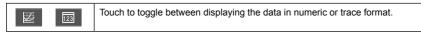

5.3.4 Volume Up/Down

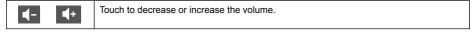

5.3.5 Dawes-Redman Analysis / Trend function

Dawes Redman TREND	The icons are only visible if the gestational age has been set and Team3 is running Sonicaid Trend or Dawes-Redman analysis.*
-----------------------	---

5.3.6 Annotation - EasiNotes

Annotation Icon appears in the control bar when printing or recording is active. This feature allows the operator to add a pre-stored note to the printout or recorded file. Touch to access the Annotation menu.

* If option(s) installed.

Annotation Main Menu



Touch each note category to access the sub menu options available.

Note

- The Easinote sub-system is very flexible allowing up to 12 groups of 12 notes to be configured on Team3.
- The "Mark" button allows users to print a blank annotation field on the trace for adding a hand written note.
- Refer to Sections 15.5 and 15.6 for details on how to access the Settings Management feature to customise and translate notes.
- The "Custom" button allows users to type custom notes using an on-screen keyboard click on the "Send" button to output the message.

Annotation Sub Menu

Touch any of the options to add the note to the recording/printing data.

The selected note will appear on the printed / recorded data.

5.3.7 Settings Menu

Touch on the control bar to view the Settings menu. This menu allows users to configure the Team3 settings to be specific to the patient. The settings remain in effect until the monitor is powered off, unless they are saved as defaults.

To save new settings as defaults, make the desired changes, then navigate to Settings Management and select Save Local Settings.

The following diagram shows how to navigate to all menu options available from the Settings menu. Touch any button to view the sub menu options available for it. Each sub menu is described on the following pages. The images show the default settings for each option. The menu options will vary depending on sensors and accessories attached

Settings	Clinical	TOCO/IUP
	System	Sound
		Recording Limits
		Background Colour
		Date & Time
		Printer Illumination
		Central Recording System

Trace Offsets		
Alarm	FHR	
7	TOCO	
	MSpO2	
	MECG/MPR	
	NIBP	
	Alarm Volume	
Analysis Settings		
Secure Settings	Service	Licensing
(passcode 12345)	(passcode 55555)	Manometer
(1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1-	([NIBP Calibration
		Contacts
		Recordings Manager
	Set Language	o o
	Hospital Name	
	Demonstration	
	Version Information	
	Regional Settings	
	Clinical Settings	
	Patient Data	
	Trace & Printer Settings	Trace Speed & Scale
		Printer Paper
	Lock Codes	Secure Settings Code
		Unlock Code
		Service Code
		Patient Data Code
	Settings Management	Save New Defaults
		Export Local Settings
		Export Easinotes
		Import Global Settings
		Restore Factory Settings
		Export Global Settings
		Import Local Settings
		Import Easinotes
	NIBP Protocol	

Touch or to return to previous page. accepts data and does not. returns to Main Application screen.

For all Menu and sub menu screens the options are selected/deselected by touching on the icons as follows:

	Option disabled	\checkmark	Option enabled
0	Option not selected	•	Option selected
\triangle	Increases selection	∇	Decreases selection

Settings Main Menu




Touch each category to access the sub menu options available.


Note

- The Trace Offsets sub menu is only available if two or more US transducers are connected and the monitor is not printing or recording.
- Team3 will return all settings to Default levels when switched off. Default settings can be customised - refer to Section 15.5.
- If the mains supply is interrupted for more than 30 seconds when no backup battery is provided, the Team3 shall revert to Default settings.


Settings Sub Menus

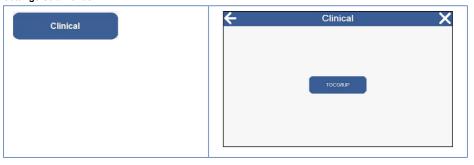




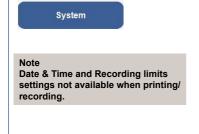



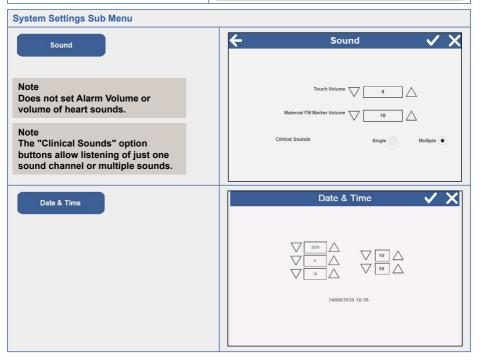

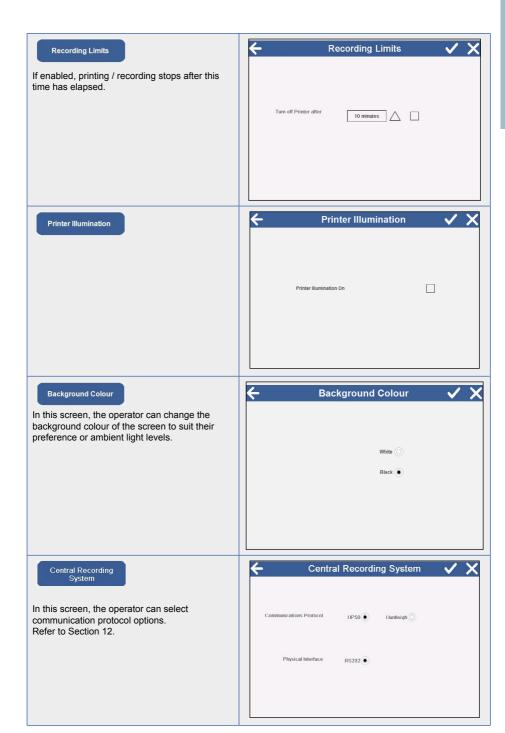



When monitoring twins or triplets, this option offsets each trace by 20 bpm to make viewing clearer.

Note

The Trace Offsets option is only available when two or more US transducers are connected.

Note

Print Twin Grids not accessible when printing or recording is enabled.



Alarm





WARNING

Ensure that ALARM LIMITS are set to realistic values. Use of extreme values can render the ALARM SYSTEM useless.


Alarm Settings Sub Menu


Touch each check box to enable / disable each alarm. If selected a


✓ will appear in the box.

Touch \triangle ∇ to set each trigger threshold.




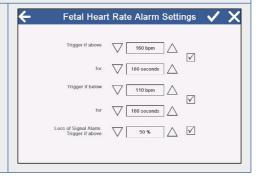

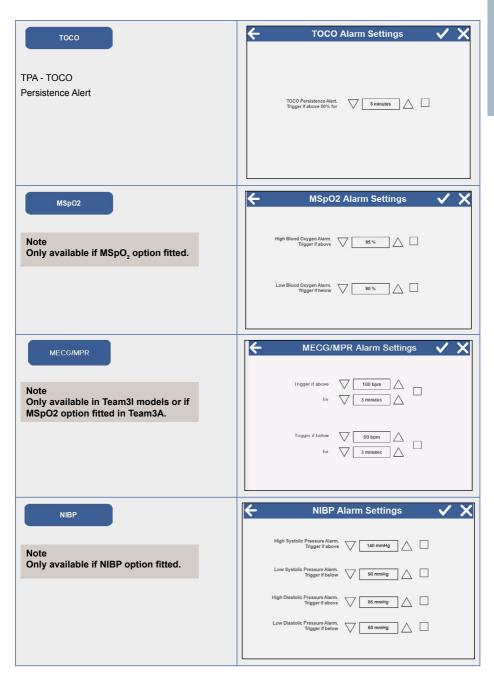

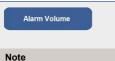

This sets the volume level for alarm sounds. This is independent of the user set volume level for normal audio sounds. Alarm volume cannot be set to zero.

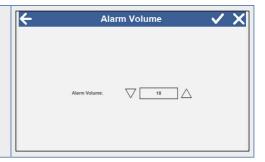

Analysis Settings

Note

Options in this screen depend on the licensed features. Intrapartum units will start up with Trend and Antepartum units will start up with Dawes Redman. The defaults can be changed in the Secure Settings area.




Secure Settings

The operator will need to enter a 5 digit code (default 12345) to enter the secure area.

Note

Refer to Section 15.5 and also the Service manual.

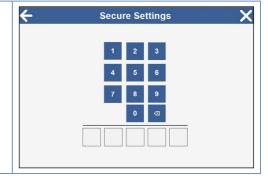

5.3.8 View Menu

Touch the icon to access the View Menu settings.

Touch each category to access the sub menu options available.



Note: FECG, MECG sub menu buttons will only be displayed in Intrapartum models and only if probes are attached.



A passcode is required in order to view patient records

The default passcode is 98765.

This screen allows the operator to select a previous CTG trace to review.



The operator can choose to search for the CTG trace by either date or Patient Name / ID.

Select source will only appear if there is a USB drive inserted. This function will enable the user to review a previously exported trace.

To review a previously exported trace:

Insert USB drive into the back of the Team3 to enable the option to review patient data.

Touch Refresh to check if any USB devices with exported recordings are connected.

Click on the Select Source radio button to display all traces that have been saved to the USB drive.

Touch the CTG trace required and touch application screen.


The selected trace will now be displayed on the application screen.

You can scroll through the trace by touching and moving the thick grey scroll bar on the screen. The trace view updates when you release the scroll bar.

If a printer is fitted, press



to print the trace.

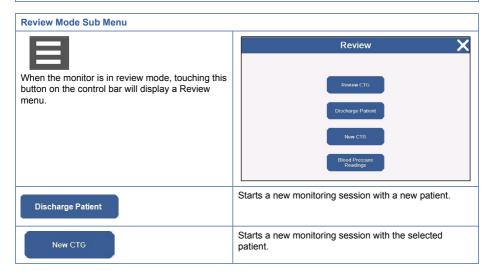


Blood Pressure Readings

Displays Blood Pressure results screen.

Touch the "Print" button to print out the results.

Blood Pressure Results					
					Print
Dato / Timo	Systolic	Diastolic	MAP	MHR	Commont
24/08/2020 10:46	130	85	105	51	
24/08/2020 10:46	134	82	108	49	
24/08/2020 10:47	107	71	81	55	
24/08/2020 10:48					Pressure I eak

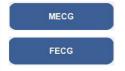


Once the monitor has established a connection and found the fetal heart rate, the MECG/FECG screen trace will be displayed.


The MECG/ FECG screens display a trace from any ECG probe (Fetal or maternal) that is plugged in.


Touch to freeze the screen to view the trace.

Touch to restart the trace.

This screen shows an example of an FECG screen trace displayed when it is searching for the fetal heart rate and has not yet established a connection.

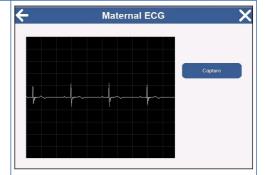

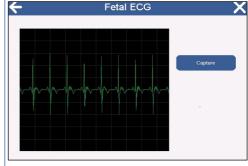

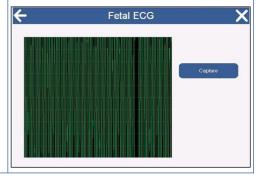

5.4 Monitoring Parameters

You can configure the screen to display a white or black background. (Refer to 'Settings').





The application screen can be displayed in either Numeric or Trace format.

Touch or to toggle between displaying the data in numeric or trace format.






Numeric format

Trace format

5.4.1 Numeric Format

The numeric data screen increases the size of the numeric data and removes the traces. This is useful when operators are not in direct attendance as the numbers can be seen from a distance. The display is split into regions, its configuration is dependent on whatever sensors/probes are attached.

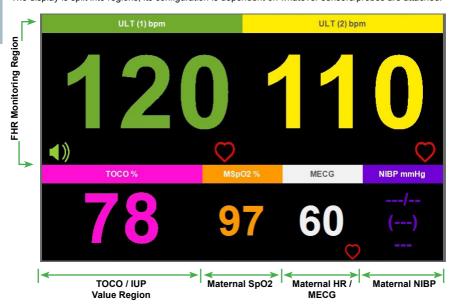

Audio

Audio can be configured for a single channel or multiple simultaneous channels - refer to section 5.3.7. Touch and hold on any FHR or MHR region of the screen to select audio for that channel. A speaker symbol



will appear on the channel if audio is enabled.

To turn the audio off, touch the region displaying the speaker symbol.

Fetal Heart Rate Signal Confidence

The heart rate is depicted by a flashing heart symbol on the bottom right corner of each region. The colour of this heart denotes the HR confidence, it is not an indicator of signal strength.



Red - High



Amber - Moderate



Yellow - Low

If the heart symbol is displayed in outline only and no FHR is displayed, the Team3 cannot detect the fetal heartbeat.

5.4.2 FHR Monitoring



Singleton Monitoring

In singleton monitoring, the FHR in displayed in large digits in the top centre region. Display shows FHR via wired ultrasound transducer with audio.



Twins Monitoring

In twins monitoring, the FHR display region is split to display the two separate Fetal Heart rates, both using wired ultrasound. Audio is enabled for channel 1 only.



Triplet Monitoring

In triplet monitoring, the FHR display region is split to display the three separate Fetal Heart rates. Display shows triplets' FHR, channels 1,2 and 3 from wired ultrasound. Audio is turned off in this display example.

5.4.3 TOCO /IUP



TOCO

The TOCO region shows TOCO measurements in progress. Touch and hold on the TOCO region to Zero the TOCO.



IUP *

The TOCO region shows IUP measurements in progress. Touch and hold on the TOCO region to Zero the IUP. Refer to instructions supplied with the IUP sensor for correct zeroing.

*Intrapartum Model only

5.4.4 MSpO₂ / MPR / MECG



MECG

The MECG region shows maternal pulse rate information obtained from the 3-lead ECG cable.

MPR bpm

MPR

If the MECG lead is not in use, the MPR measured by MSpO₂ will be displayed.

MSpO₂

There are three types of MSpO₂ sensor, BCI, Nellcor and Masimo, the following table describes the differences between them.

BCI



The MSpO₂ region shows the probe plugged in and measuring oxygenation.

Nellcor



The ${\rm MSpO}_2$ region shows the probe plugged in and measuring oxygenation. Nellcor supports the following symbols:

- Interference

- No finger inserted

- Pulse search/no pulse detected

Masimo



MSpO2 %
all 100 Pi 0.56

Trace View

Diagnostics Screen (For details see Appendix 6 sections Perfusion Index and Siq Bar Graph)
The Masimo SpO2 display's supports the following:

- Perfusion Index Indicator (Pi)
- Sig Bar Graph.
- These can be enabled or disabled (see Clinical Settings)

Technical Alarms (For details see Appendix 6 section Masimo Technical Alarms)

Two types of technical alarms are supported for Masimo:

- Blocking Technical Alarms The SpO2 probe is unusable and measurements cannot be made (e.g. sensor expired).
- Informative Technical Alarms The reading may be compromised unless action is taken (e.g. Too much ambient Light).

Sensor Off Patient (For details see Appendix 6 Section Sensor Off Patient)

- If the sensor is either removed or falls off a patient following a valid SpO2 reading an Informative Technical Alarm will occur.
- If the sensor is either removed or falls off a patient and no valid SpO2 reading has been detected, an Informative Message will occur.

Informative User Messages (For details see Appendix 6 Informative User Messages)

 Informative messages provide feedback to the user for messages which may assist with device usage (e.g. searching for pulse)

Sensor or Cable expired or Near Expiry (For details see Appendix 6 Sensor or Cable Expiry)

 The Masimo SpO2 module monitors the usage of both cables and sensors. Feedback will be provided when either a cable or sensor are near expiration or expired

5.4.5 Maternal NIBP

140/80 (92) 102


The NIBP region shows a measurement having been made.

Touch and hold the NIBP region to access the NIBP menu.

Refer to 'Maternal Blood Pressure' Section 7.5 for instructions on performing maternal blood pressure.

5.4.6 Trace Format

The graphical trace screen emphasizes the display of data in graphical form, with numeric data shown on the right hand side.

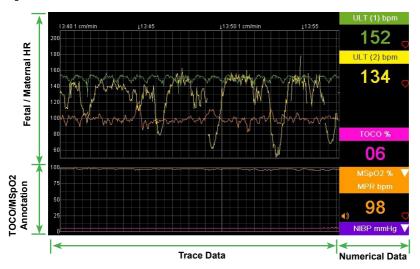

Only one of MSpO₂, NIBP and MECG / MPR can be expanded at any one time.

Touch to expand each measurement.

Annotations and Clinical Events are printed vertically in the TOCO / MSpO₂ region of the trace screen.

5.5 Switching the Unit OFF

Touch and hold (1) to switch the unit Off. A confirmation screen will be displayed.



Touch Power Off to turn off the Team3 or touch to return to the last screen.

Alternatively, continued touch on the off button for ~15-20s will switch the unit off directly from any machine state.

5.6 Auto Restart

In the unlikely event that Team3 operation is interrupted, the monitor will automatically restart.

Following a restart, all previously configured settings and operating modes will be retained and the monitoring function will resume as normal.

5.7 Battery Charging


5.7.1 The unit is switched OFF

If the following conditions are all true,

- · The unit is switched OFF
- The unit is connected to the mains supply
- · The battery option is installed
- · The battery is not fully charged

then the On/Off button will illuminate green () and flash, indicating that the battery is charging. Otherwise the indicator will be OFF.

5.7.2 The unit is switched ON

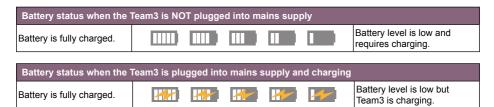

Note

- · Keep the fetal monitor plugged in whenever possible to maintain battery charge.
- Typical charge time to 90% capacity from discharged is 3 hours.
- With Battery supply, monitoring a single ultrasound channel at 25% volume and no printing, Team3 can operate for a minimum of 4 hours.

6. Monitoring Fetal Parameters

6.1 Preliminary



Ensure that the transducers and transducer belts are clean and ready for use. In particular, check the transducers for cracks or signs of damage. See also cleaning instructions in Section 15.

- Switch on Team3.
- 2. Check the printer (If fitted). Ensure there is sufficient paper.
- Check the printer setup (FHR offsets, Twins grids).
- 4. Enter patient details, if required.
- To use the Dawes-Redman CTG analysis, the gestational age must be entered before starting the printer / recorder

6.2 Ultrasound Monitoring

- 1 Connect the green transducer to the green socket marked FHR1 on Team3. On the main screen, the ULT1 region becomes active.
- 2. Palpate the abdomen to determine fetal lie and position.
- Make the patient comfortable in a semi-recumbent or sitting position. Place the belt around the abdomen, and secure over transducer button.



Transducer and belt attachment


- Apply Aquasonic coupling gel liberally to the face of the transducer. Position the transducer on the abdomen over the fetal site. Move it slowly until the characteristic hoof-beat sound of the fetal heart is heard.
- 5. When a good signal is being obtained, Team3 displays the FHR. Check that the fetal heart pulse lamp flashes with each fetal heartbeat, and that the FHR is different from the maternal pulse rate taken at the mother's wrist (or by alternative means). Make a note of the maternal pulse on the chart paper.
- Connect the fetal event marker to the socket on the rear panel. Explain to the mother how and when to use it. Note that a timeout between presses prevents markers being generated continuously.
- 7. Adjust the sound level with the volume controls on the touchscreen.
- 8. To start printing/recording, press the printer/recorder on/off button on the touchscreen.

Note

The printed trace, and the trace saved to the patient database, will only show trace data from the point when the printer is started. Any on-screen trace data prior to this will be discarded.

Hints on Monitoring

Ultrasound Transducer

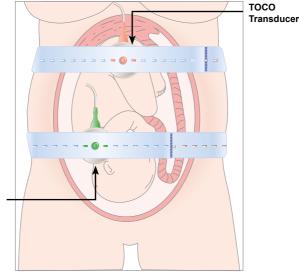

Transducer positioning for Ultrasound monitoring

- Make sure the transducer is placed in the optimum position. Avoid positions with strong placental sounds (swishing) or the fetal cord pulse at the same rate as the fetal heart.
- If the fetus is in the Occiput Anterior presentation and the mother is supine, the clearest heart sound will normally be found on the midline below the umbilicus.
- It is not possible to monitor the fetal heart rate unless an audible fetal heart signal is present. It is
 important to distinguish the fetal pulse from the maternal pulse. To do this, feel the mother's pulse
 during the examination, or monitor Maternal HR with MECG or MSpO₂.

6.3 False recording of FHR



When monitoring the fetal heart rate using an external ultrasound transducer, the fetal heart rate may sometimes be falsely reported. This is characteristic of ultrasound monitoring and can have a number of causes, including:

- Inadvertent monitoring of the maternal heart rate; whereby the transducer picks up stronger signals from the pulsations of the maternal vessels, particularly in the second stage of labour (when the fetal head and heart is lower within the birth canal);
- Signal artefact, such as double-counting or half-counting, whereby the recorded fetal heart rate suddenly appears suspiciously higher or suspiciously lower than the audio signal coming from the monitor's loudspeaker.

Note: If you have reason to doubt the reliability of the fetal heart rate and/or maternal heart rate, always confirm by independent means.

How to minimise the chances of double rating, half rating or other types of artefact occurring

- 1. Palpate the maternal pulse for one minute simultaneously and record it on the printed output. Check that the maternal rate is different from the displayed fetal rate.
- Recording a signal for maternal MECG/MSpO₂ will help to identify any cross-correlation between maternal and fetal heart rates.

- 3. When using ultrasound, listen to the Audio signal. The Doppler audio sound will always reflect the true rate of the detected signal and cannot be affected by double rating or half rating. Fetal heart sound should be like a galloping horse, not a swishing sound from maternal vessels.
- 4. Repeat any of 1 to 3 if half rating or double rating or other artefact is suspected
- Re-positioning the Ultrasound transducer to ensure clear heart valve sounds are heard will ensure best performance.

Note: Disconnect all non-used ultrasound transducers as interference can result in an artificial trace when the transducer is not applied to the patient.

6.4 Twins / Triplets Ultrasound Monitoring

Use the same procedure as for singleton monitoring, using multiple transducers.


- Connect the green transducers to the green sockets marked FHR1/FHR2/ FHR3 on Team3. On the main screen, the ULT1/2/3 regions become active.
- 2. Palpate the abdomen and ascertain the lie of each fetus.
- 3. Place the ultrasound transducers on the patient's abdomen in the optimum positions. Use the ULT1 transducer to monitor the first, presenting fetus. Make the transducers secure with belts.
- 4. To hear the audio signal for each fetus, press the relevant area of screen. The Audio symbol shows which is the active audio channel.
- Check that the two/three heart rates are different. If the heart rates appear similar check the positions of the transducers.
- 6. Connect the fetal event marker to the socket on the rear panel. Explain to the mother how and when to use it
- 7. Refer to Settings Menu Print Settings if printer offsets* are required on the traces.

*Note: Once selected, this offset option remains active until de- selected by the user or the unit is switched off.



When interpreting a trace to which the +20bpm or -20bpm offsets have been applied, the interpreter must subtract or add these offsets (20 bpm) from the displayed baseline rate to determine true baseline rate – failure to do so may result in misinterpretation of the trace and inappropriate clinical management. The ULT2 +20 / ULT3 -20 flags are printed at regular intervals as a reminder.

6.4.1 Print Twins Grids

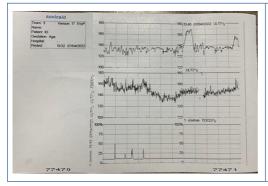

Enabling the print twin grids setting allows twin FHR's to be simultaneously printed in separate grids on the same page of the print-out. (Settings >Trace Offsets>Print Twins Grids).

Print Twin Grids is recommended for antepartum use only.

6.5 Fetal ECG (Team3I models only- using a Fetal ECG electrode)

Connection

An FECG transducer can be connected via any of the green sockets on the front of the monitor (FHR1, FHR2, FHR3).

Note:

Only one FECG transducer can be connected at a time. If more than one FECG transducer is connected, the following screen will be displayed:

Invalid Probe Configuration

Please remove invalid probe

It is possible to monitor FECG for a fetus independently of the ultrasound monitoring. The FECG channel can be used simultaneously with the two ultrasound channels for triplet monitoring.



- Always check electrodes and their packaging before use.
- Use only FECG electrodes supplied with the Team3, or listed in the Accessories and Consumables brochure.

Monitoring procedure using Safelinc™ / Qwik Connect™ electrodes



Follow the instructions for use supplied with the fetal ECG electrode

- 1. Attach the FECG lead to the mother's leg, using the adhesive electrode pad.
- 2. Attach the FECG electrode to the fetal presenting part.
- 3. Connect the FECG electrode to the FECG lead.
- Allow a few minutes for the signal to stabilise and a clear fetal heart rate to be displayed. The confidence indicator should be a red heart.
- 5. Adjust the volume control as necessary.

7. Monitoring Maternal Parameters

7.1 Contractions (using TOCO transducer)



Use only TOCO transducers supplied with the Team3, or listed in the Accessories.

- Ensure that the TOCO transducer and belt are clean and ready for use. In particular, check the transducer for cracks or signs of damage. See also cleaning instructions in Section 15.
- 2. Connect the TOCO transducer to the pink socket on Team3.
- Place the belt round the abdomen, and secure it over the transducer button so that it is retained on the midline over the fundus of the uterus.
- 4. DO NOT USE COUPLING GEL. Wipe off any gel present on abdomen around this area.
- Contractions activity is measured as a % of full scale deflection. Touch and hold the TOCO region of the screen to zero the contractions to the set % level (0, 10, 20% - see settings). If enabled, an auto-zero function will activate if the trace has been flat for 3+ minutes.



Check the baseline periodically and re-zero the TOCO if necessary.

7.2 Contractions (using IUP transducer)



- Use only IUP transducer types supplied with the Team3, or listed in the Accessories.
- Always check transducers and their packaging before use to ensure that there is no damage and that sterility has not been compromised.
- Follow the manufacturers' instructions for correct use.
- Do not connect IUP transducers to Team3 Antepartum models as they are not compatible.
- 1. Connect the IUP connecting lead to the pink socket on Team3.
- 2. Check IUP units of measurement (mmHg or kPa). Change, if required (See Section 5.3 Settings Menu).
- 3. Insert the catheter as described in the instructions supplied with it.
- Zero the transducer as described in the instructions supplied with it. Touch and hold the IUP region of the screen to zero the IUP.
- To confirm placement and function of the transducer, ask the patient to cough. A spike should be observed in the contractions measurement.



7.3 Fetal Movement Event Marker



When monitoring twins, this function will indicate movement of either twin - it is not possible to associate a movement event with a specific fetus.

Fetal movement events can be captured in 2 ways, automatic and manual.

7.3.1 Automatic Fetal Movement Event Marker



Automatic Fetal Movement is not indicated for use during labour.

Fetal movement events are recorded automatically when this mode is selected, and an appropriate detection level is set. Refer to section 15.5 - Secure Settings - Clinical Settings Sub Menu to activate Automatic Fetal Movement option.

A triangular marker is automatically printed at the top of the fetal heart rate grid.



- Automatic Fetal Movement Marker

Please be aware Automatic Fetal Movement Marker's in the absence of fetal life may be a result of:

- Movement of the deceased fetus during or following maternal movement.
- Movement of the deceased fetus during or following maternal abdominal examination.
- · Movement of the ultrasound transducer.
- The ultrasound transducer detecting a maternal movement, such as the mother coughing or crying.

7.3.2 Manual Fetal Movement Event Marker

The Fetal Movement Event Marker is a pushbutton switch fitted with a captive cable and connector which is supplied as standard. It is plugged into the socket on the rear of the unit. The switch allows maternally sensed fetal movements to be recorded.



- Use only Fetal Event Marker switch supplied with the Team3, or listed in the Accessories.
 Do not connect any other item of equipment to the Fetal Event Marker socket.
- Before use, inspect the Fetal Event Marker switch and connecting cable assembly, ensuring that it is clean and undamaged. See Section 15 for cleaning procedures.
- . The Fetal Event Marker must be kept dry. Do not immerse or use in the presence of liquids.
- 1. Connect the event marker to the jack socket on the rear of Team3 (
- 2. Give the event marker to the mother. Tell her to press the button every time she feels a fetal movement.

A triangular event mark is printed at the top of the TOCO grid.



- Manual Fetal Movement Marker



Note: Team3 can record both Manual and Automatic Fetal Movements simultaneously.

7.4 Maternal ECG (MECG)


Monitoring MECG allows a check to be made that the fetal heart rate being recorded does in fact belong to the fetus and not the mother.

MECG is not provided as a diagnostic ECG function.

MECG monitoring procedure

 Use self-adhesive disposable electrodes. Placement of the electrodes is not critical, though it is a good idea to have the lower electrode placed clear of the diaphragm, as the muscles here are very active in contraction.

A recommended arrangement might be:

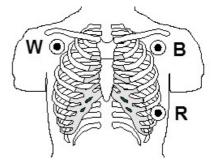

- Connect the MECG lead (white) to the MECG socket on the side of Team3.
- 3. Clip the three flying leads of the MECG lead to the electrodes. They are colour-coded white, black and red (W. B and R in the diagram above).
- 4. Allow a few minutes for the signal to stabilise and a clear maternal heart rate to be displayed. Check the signal visually by displaying the MECG waveform (Press > MECG).

7.4.1 Fetal Cross Channel

The monitor's 'Fetal Cross-channel' detection technology can help by continuously monitoring the maternal pulse and fetal heart rate by detecting when the same heart rate is being recorded.

Either MECG or SPO2 finger sensor can be used to derive the maternal pulse.

If the maternal and/or fetal heart rates appear similar an alarm will sound and 'FETAL CROSS CHANNEL' will be printed.

If you have reason to doubt the reliability of the fetal heart rate, always confirm by independent means.



- A poor MECG/SPO2 signal will prevent the FHR cross-channel from functioning. If a good MECG/SPO2 signal cannot be obtained, other methods must be used to ensure FHR integrity so as to prevent accidental interpretation of MECG/MPR as FHR.
- Check MECG/SPO2 signal quality regularly to ensure that no deterioration has occurred.
- The Team3I MECG function is not intended for diagnostic use where maternal cardiac monitoring is required appropriate diagnostic patient monitoring equipment must be used.
- Ensure that any loose conductive parts of electrodes and associated connectors for applied parts including the neutral electrode do not contact any other conductive parts including earth.

7.5 Maternal Blood Pressure

Team3 can measure the mother's systolic and diastolic blood pressure, mean arterial pressure, and the average pulse rate during the measurement. Measurements can be made manually or automatically (at an interval defined by the user).

An alarm is triggered if the mother's blood pressure goes above or below certain limits. The alarm can be switched off if preferred.



In countries where mean arterial pressure is not used, the value may be disabled on the Team3 printout and display.

Attaching the cuff

The correct selection, and positioning, of cuffs is of paramount importance in ensuring reliable BP readings.

Cuff size

It is essential to ensure that the cuff size is matched to the patient's arm circumference. Two cuff sizes are supplied as standard with the Team3 blood pressure option:

- Medium cuff covering arm circumferences from 24-32cm
- Large cuff covering circumferences from 32-42cm

While the above should cover the vast majority of patients, other cuff sizes are available as optional accessories.



Use of an incorrectly sized cuff may result in errors in the BP measurement.

Cuff positioning

To ensure accurate measurement, the cuff must be positioned correctly. It is positioned on the upper arm, and can be applied over light clothing. Any tight, thick or constrictive clothing should be removed.

The cuff must be applied with the hose coming out at the bottom of the cuff, not the top, and should be level with the heart.



When fitting the cuff, note the position of the 'Artery marker' printed on the cuff. Do NOT rely on the hose as the artery position marker.

Other considerations

There are many other factors which can effect BP measurement .

Key issues that affect accuracy of BP measurements:

- The patient should be relaxed and rested minimum 5 minutes before commencing measurement
- The patient should not smoke, exercise or consume caffeine for 30 minutes before the test
- The patient should be sitting upright and comfortably with the arm raised to the level of the heart, suitably supported – it should not be held in position by the patient
- The patient should not move or speak during the test
- The cuff must be of the correct size and correctly positioned as detailed above do NOT rely on the hose as the artery position marker

A conventional sphygmomanometer uses a fundamentally different method of measuring BP based on auscultation. This is generally recognised as the gold standard in non-invasive BP measurement and it is recommended that local protocols are in place for this method to be used for diagnosing/confirming hypertension.

Measurement Limitations

NIBP readings can be affected by the position of the patient, their physiological condition, the measurement site, and physical exercise. Thus a clinician must determine the clinical significance of the NIBP information.

The measurement may be inaccurate or impossible:

- · with excessive and continuous patient movement such as shivering or convulsions
- if a regular arterial pressure pulse is hard to detect with cardiac arrhythmias
- with rapid blood pressure changes
- with severe shock or hypothermia that reduces blood flow to the peripheries
- with obesity, where a thick layer of fat surrounding a limb dampens the oscillations coming from the artery
- · on an edematous extremity.

Suspect Hypertensive Patients

To make a measurement for use in the diagnosis of hypertension, follow the steps below:

- 1 Ensure the patient is comfortably seated, with their legs uncrossed, feet flat on the floor and back and arm supported.
- 2 Ask the patient to relax and not talk before and during the measurement.
- 3 If possible, wait 5 minutes before making the first measurement.


7.5.1 Taking BP measurements



Attach the correct size cuff to the mother.

Touch and hold the NIBP region to access the NIBP menu.

You can select either manual mode or automatic mode:

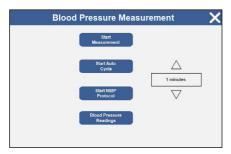

Manual NIBP

Touch Start
Measurement

to start a manual NIBP reading.

Once completed, the reading will be displayed in the NIBP region.

Automatic NIBP

To set an automatic measurement, touch \triangle ∇ to set the interval between measurements.


Touch to start the measurement. Once completed, the reading will be displayed. A clock symbol

will be shown in the NIBP region. An NIBP reading will automatically be taken at the determined interval.

In this screen, you can see a countdown timer indicating when the next blood pressure is due.

To cancel automatic NIPB readings, touch and hold the NIBP region to access the NIBP menu and touch



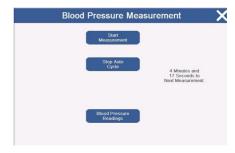

NIBP Protocol

Select Protocol to start the sequential NIBP protocol as follows:

- 1. BP every 5 minutes times 12 measurements then
- 2. BP every 15 minutes times 4 measurements then
- 3. BP every 30 minutes times 4 measurements then
- 4. BP hourly forever until turned off

During the protocol, a clock symbol will be displayed in the NIBP region. An NIBP reading will be taken at each point in the protocol and the blood pressure will be displayed.

To cancel the NIBP protocol, touch and hold the NIBP region to access the NIBP menu and touch



Note

- The latest measurement results are displayed continuously until a repeat measurement is made or for a period set by the user in the system settings. Refer to section 15.5.
- The above default protocol can be customised. Refer to section 15.5.



 To stop the measurement, touch and hold the NIBP region. Touch stop the measurement.



to

 To avoid harming the patient, clinical judgement should be used to determine whether unattended blood pressure measurements are appropriate, particularly in the range 1 to 5 minutes.

Failed measurements (manual and automatic)

When an NIBP measurement fails:

The NIBP display shows ---/--.



- Inspect the application site regularly to ensure skin quality and inspect the extremity
 of the cuffed limb for normal colour, warmth and sensitivity. If the skin quality changes
 or if the extremity circulation is being affected, move the cuff to another arm or stop
 the blood pressure measurements immediately. Check more frequently when making
 automatic measurements
- Always use the correct size of cuff. Do not use any cuffs other than those licensed for use with the Team3.
- The blood pressure cuff must be properly positioned to ensure blood pressure accuracy and patient safety. Wrapping the cuff too loosely (preventing proper inflation) may result in inaccurate NIBP readings.
- · For maternal use only; do not use on neonates.



- Safety mechanisms are incorporated to prevent over-inflation, or extended period inflation. However, patients should be advised to summon assistance if any discomfort results from the use of the NIBP function, and its use discontinued.
- Note that, as with all auto-BP measurement systems, results may vary from one make
 to another, and from measurements based on using a manual sphygmomanometer.
 Readings are also subject to the well documented "white coat effect" and patients
 should be rested for a minimum of 5 minutes before measurements are taken. It is
 recommended that BP readings are confirmed using a manual sphygmomanometer
 before diagnosing clinical hyper- / hypo- tensive conditions requiring treatment.
- Avoid taking measurements during contractions as this may affect the reading.
- Frequent measurements may cause blood flow interference and injure the patient.
- · To prevent further injury, do not place the cuff on any wound.
- Do not place the blood pressure cuff on a limb under intravenous infusion, intravenous therapy or arteriovenous shunt, or the transient blood flow interference will injure the patient.
- Do not place the cuff on the arm at the same side as mastectomy, or lymph node clearance.
- NIBP readings may be inaccurate for patients experiencing moderate to severe arrhythmia.
- The increasing cuff pressure may cause transient function failure to other monitoring equipment used on the same limb.
- Patient injury risk. Any external compression of the blood pressure hose or cuff may cause patient injury, system errors, or inaccurate measurements.
- Patient injury risk. Never install Luer Lock connectors on Team3 blood pressure cuff tubing. Using these connectors on blood pressure cuff tubing creates the risk of mistakenly connecting this tubing to a patient's intravenous line and introducing air into the patient's circulatory system.
- Ensure the inflation tube connecting the blood pressure cuff to the Monitor is not obstructed or tangled.
- Extremes of temperature, humidity and altitude outside limits specified for Team3 can affect results.


Reviewing BP Results

Touch and hold the NIBP region to access the NIBP menu.

Touch Readings to show the BP results screen.

The NIBP results will be displayed.

Touch \triangle ∇ to scroll through the results.

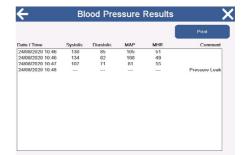

Note: BP results can be printed in review mode - see section 5.3.8.

7.6 Maternal Oximetry

Team3 can measure the mother's blood oxygen saturation and pulse rate. An alarm sounds (if enabled), if the mother's oxygen saturation drops below the set level, or if her pulse rate goes above or below certain limits.



Recommended for best practice:

- Unplug SPO2 sensors when not in use; leaving SpO2 sensors plugged in can impact the Team3's performance
- Do not clip the SpO2 sensor to anything other than the mother.

7.6.1 Procedure

Note: If using the Sonicaid Wireless Transducer System FTS3 or Freedom SF1, you will need to view the Version screen (See 15.5 Secure Settings) to determine if you can use SpO2 and wireless transducers at the same time on your Team3. Mainboard versions less than 5 cannot support concurrent use of Freedom and SpO2.

- 1. Connect the maternal oximetry sensor to the maternal oximetry cable.
- Connect the oximetry cable to the Team3 connector. Ensure that the connector key on the oximeter lead is correctly aligned with the MSpO₂ socket keyway on the Team3 connector. Push the connector straight in until it locks. Do not twist.
- 3. Attach the sensor to the mother. See the instructions supplied with the sensor.
- 4. When it finds a signal, the results will be displayed in the MSpO₂ / MPR bpm region of the screen.

Note: If monitoring MECG, the MECG heart rate overrides the pulse rate from the oximeter.

5. Adjust the alarm limits and alarm volume, if necessary. See Section 8.

Disconnecting the oximetry sensor

To disconnect the oximetry sensor, grip the outer part of the connector and pull to release the locking catches.



- Do not try to disconnect the oximetry module by pulling on the lead. This will be unsuccessful, and the connector may be damaged.
- Do not use any maternal oximetry sensors other than those approved for use with the Team3. Use of incompatible sensors or connecting cables could result in patient harm.
- Use only Sonicaid connecting cables.
- Use only Masimo compatible RD SET MD14-05 5 ft. cable on fetal monitors fitted with Masimo MSpO2.
- Use only Nellcor compatible DOC 10 connecting cables on fetal monitors fitted with Nellcor MSpO2.
- Remove any nail varnish and artificial fingernails before use as they are likely to affect the readings. Nail varnish remover contains acetone. Contact with acetone will damage the maternal oximetry sensor.
- Relocate the sensor periodically (at least every 4 hours) and monitor skin integrity. If the
 mother experiences discomfort due to the oximetry sensor, discontinue use immediately.
- A poor MSpO₂ signal may prevent the FHR cross-checking from functioning. If a good MPR indication cannot be obtained other methods must be used to prevent accidental interpretation of MPR as FHR.
- Inspect MSpO, sensor for damage before use.
- Check MSpO, signal quality regularly to ensure that no deterioration has occurred.
- Do not use the MSpO, sensor on the same arm as the NIBP cuff.



- BCI (Round Socket) A functional tester cannot be used to assess the accuracy of a
 pulse oximeter probe or a pulse oximeter monitor. To check the function of the device,
 an optional Oximeter/ECG Patient Simulator is available as an accessory (Smiths
 Medical PM, Inc. Cat# 1606). The simulator attaches to the Oximeter in place of the
 sensor or patient cable. It provides a known %SpO₂ and pulse rate signal to the Oximeter,
 allowing the Oximeters performance to be checked.
- Nellcor (Rectangular Socket) Some models of commercially available bench top
 functional testers and patient simulators can be used to verify the proper functionality of
 Covidien Nellcor™ monitoring systems, sensors, and cables. Reference the individual
 testing device's operator's manual for the procedures specific to the model of tester
 used. While such devices may be useful for verifying that the sensor, cabling,
 and monitoring system are functional, they are incapable of providing the data required
 to properly evaluate the accuracy of a system's SpO, measurements.

Further information

The following information and warnings are supplied in accordance with the requirements of ISO 9919:

- 1. The Team3 MSpO₂ system is calibrated to display functional oxygen saturation.
- The range of peak wavelengths and maximum optical power outputs for the approved pulse oximeter probes are as follows:

Probe Type	Peak Wavelengths	Optical Power Output
BCI 3444	660±3nm and 905±10nm	1.8 and 2.0mW typ.
Nellcor DS100A	660 and 890nm nom.	<15mW
Unimed Soft Tip U4105-06 660±3nm and 905±10nm <18mW		<18mW
Masimo RD SET DCI (4050)	660nm (red light) and 940nm (infrared light)	<15mW

- 3. The function or accuracy of the MSpO, system may be affected by the following:
 - · Incorrect sensor position.
 - Presence of an arterial catheter, blood pressure cuff, or intravascular line on the same limb.
 - Ambient light.
 - Excessive patient movement.
 - Intravascular dyes or externally applied colouring such as nail polish, dye or pigmented cream.
 Artificial fingernails.
- 4. Displayed ranges: MSpO₂ and pulse ranges are as shown in section 17.

5. Data update period: 1 second Heart rate averaging: 8 beats Alarm latency: < 1 second

Alarm limits: See Section 17- Specifications.

7. Compatible probe types: BCI (Smiths Medical) Adult Comfort Clip 3444, Nellcor Durasensor DS-100A

Unimed Soft Tip U4105-06, Masimo RD SET DCI (4050)

Recommended maximum application time: 4 hours
 Probe temperatures >41°C - Specific instructions: Not applicable
 Probe temperatures >41°C - Operator sequence of actions: Not applicable
 Probe temperatures >41°C - Maximum temperature: Not applicable
 Probe temperatures >41°C - Age restriction: Not applicable

13. Biocompatibility: Refer to probe manufacturer for full details.

14. Sterility: Not applicable. Probes are not supplied pre- sterilised.

15. Caution notes: See above for cautions regarding use of compatibl sensors and connecting cables.

16. Patient population: For use on maternal patients only.

Applied body part: Any well-perfused finger that fits comfortably in the sensor Index finger preferred.

Application: For occasional use on maternal patients within a fixed healthcare facility.

Note

For further clinical information/studies/reports please refer to Appendix 5 - MSpO2 Addition Clinical Information.

Note:

- On fetal monitors fitted with Masimo MSpO2: For further clinical information, see "Appendix 6 Maternal SpO2 Additional Masimo Information".
- On fetal monitors fitted with Nellcor MSpO2: For further clinical information, see "Appendix 5 Maternal SpO2 Additional Nellcor Clinical Information".

Note:

- Use of non-Masimo SpO2 sensors/cables with Team3: If using any SpO2 sensor or connecting
 cable other than Masimo, the customer acknowledges that Huntleigh makes no representation as
 to the accuracy of the measurement of SpO2.
- Use of non-Nellcor SpO2 sensors/cables with Team3: If using any SpO2 sensor or connecting
 cable other than Nellcor, the customer acknowledges that Huntleigh makes no representation as
 to the accuracy of the measurement of SpO2.

BCI Clinical Evaluation report:

This study was a descriptive, cross-sectional investigation of healthy, human subjects comparing four Model 31400 Pulse Oximeter Modules (Board 31402B2) determined oxygen saturation (SpO₂) values during motion (test condition) to CO-oximeter determined functional oxygen saturation (SaO₂) values (reference condition). Two additional Model 31400 Pulse Oximeter Modules (Board 31402B2) which were not subjected to motion were used as a control and to determine stable plateaus in the oxygen saturation readings.

Two Model 31400 Pulse Oximeter Modules (Board 31402B2) using NellcorTM DS-100A sensors also not subjected to motion were (one old style – gray connector and one new style – blue connector) tested. The study was conducted at oxygen concentrations that targeted an even distribution over the SaO_2 range of 70% to 100%- SaO_2 .

Ten adult, volunteer subjects participated in this trial. They varied in age from 20 to 39 (mean 25.9) years. Two Black or African American, seven White

subjects and one subject who did not indicate a race were enrolled. Eight subjects described themselves ethnically as non- Hispanic or non-Latino and two as Hispanic or Latino. There were five female and five male subjects in this trial.

Unimed Soft Tip Evaluation report:

The following descriptive summary was taken by a cross section of subjects to analyse the Unimed Soft Tip sensor. (Listed in Table A-3): 12 subjects were analysed for the study. There were 7 males and 5 female subjects enrolled into the study. The mean age of study participants was 28, with a range of 21 to 46 years of age. Three subjects had dark pigmentation from light to dark. Weight ranged from 52 kg to 86 kg, and height ranged from 153 cm to 180 cm.

Nellcor Clinical Evaluation report summary:

The following summary describes the demographic information of the subjects enrolled into the study for all other sensors (listed in Table A-1): A total of 11 subjects were analyzed. There were 4 (36.4%) males and 7 (63.6%) female subjects enrolled into the study. The mean age of study participants was 30.36 \pm 7.85 years, with a range of 22 to 46 years of age. Three subjects had dark pigmentation (dark olive to extremely dark). Weight ranged from 58.4 kg to

114.4 kg, and height ranged from 159 cm to 187 cm.

 $A_{\scriptscriptstyle RMS}$ (Accuracy root mean square) is used to describe the accuracy of pulse oximetry, which is affected by both bias and precision. Both SpO2 and pulse rate meet the acceptance criteria for the D100A sensor during non-motion conditions.

(≤ 3.0% using 411 data points, over 70-100% saturation, and ≤3.0% using 444 data points for BMP).

8. Alarms

8.1 What is meant by an alarm

There are 2 types of alarm on Team3; Technical Alarms and Clinical Alarms. Technical alarms are displayed with a blue bell icon and clinical alarms are displayed with a yellow bell icon. Both alarms will have different sounds. Technical alarms will not print.

The alarms in Team3 are intended to alert users to monitoring data which fall outside user set levels/timings for each type of alarm.

They are not intended to alert users to clinical conditions or pathology. They must not be relied on for this, which remains the responsibility of the user.

These alarms must not be relied on to detect pathological heart rate patterns.



- Team3 must be printing / recording for alarms to be active.
- · All alarms have Medium priority.

8.2 What is seen and heard

When the Team3 enters an alarm condition, an alarm sounds, will appear at the top of the screen and the associated alarm regions will flash.

An alarm indicator will be printed on the trace screen identifying the time of the alarm . An alarm condition will be printed on the TOCO region of the screen.

The alarm will continue to sound until the operator acknowledges the alarm.

Touch to acknowledge the alarm and turn off the audible and visual indicators.

An alarm acknowledgement indicator will be printed on the trace screen identifying the time of the alarm acknowledge.



Printed Indicators

- Fetal alarms
- Maternal alarms

FECG, ULT1, ULT2 and ULT3 Fetal High Heart Rate	Maternal Systolic High Alarm
FECG, ULT1, ULT2 and ULT3 Fetal Low Heart Rate	Maternal Systolic Low Alarm
FECG, ULT1, ULT2 and ULT3 Fetal Signal Loss	Maternal Diastolic High Alarm

Maternal High Heart Rate	Maternal Diastolic Low Alarm	
Maternal Low Heart Rate	Toco Persistence Alert	
Maternal Low O ₂ Saturation Alarm		
Maternal High O ₂ Saturation Alarm		

8.3 Responding to alarms

Type of alarm Recommended user response

Signal outside range Acknowledge alarm

Responsible clinician to decide what action to take

Loss of signal Acknowledge alarm, if appropriate

For FHR: reposition the transducer

For other parameters: check transducer attachment and connections

Fetal Cross Channel Re-position transducers if required.

8.4 Controlling alarms

There are four ways of controlling alarms:

- Acknowledge (i.e. silence) it when it occurs. Switch it off, so that it is never triggered.
- Alter thresholds so that it occurs more frequently or less frequently.
- Alter the volume of the audio alarm.

Switching alarms off, changing thresholds or volume

See Section 5.3.7 - Settings - Alarm Settings.

8.5 Nellcor SpO2 technical alarms (Nellcor SpO2 option only)

The following technical alarms may be displayed:

MSpO₂ Extended updates

Indicates maternal heart rate measurement has been static for 25+ seconds. If triggered, the displayed MPR is invalid. Re-position the sensor (try a different finger).

MSpO2 Pulse Timeout

Indicates that the pulse signal has been lost. Re-position the sensor (try a different finger) .

Sensor fault

Indicates sensor is faulty - check cable connections or try another sensor and/or sensor interface cable.

SpO₂ fault

Indicates an internal SpO2 module fault - service repair required.

Note

To test the alarms, it will be necessary to simulate alarm conditions using external input means. For FHR alarms, this can be done simply and quickly just by stroking the face of a connected Ultrasound transducer by hand, varying the rate to trigger high and low rate alarms accordingly.

9. Printing

9.1 Introduction

Team3 incorporates a thermal printing system for use with continuous fan-fold thermal paper. It is virtually silent, rendering it unobtrusive in operation.

9.2 Paper options

The printing system is optimised for use with plain Sonicaid thermal print paper, although alternative paper trays are available as accessories to facilitate the use of Philips or GE/Corometrics paper. Note that the printout options available with alternative paper types may be restricted due to difference in size compared to the Sonicaid paper.

Standard thermal print paper fades over a period of time – typically up to 5 years depending on storage conditions. If it is necessary to guarantee a longer storage time for paper traces, the use of Architrace paper is recommended. This has a 25 year rated lifetime. Alternatively, consider the use of Central Monitoring Software, such as Sonicaid Centrale, Fetalcare or Obstetric Archive, which allow traces to be stored and archived electronically.

9.3 Paper care and handling

To preserve the life of the paper, both before and after printing, it should be stored indoors at a temperature of 18-25°C, and with a relative humidity of 40-60%.

Do not expose to UV light sources such as direct sunlight or fluorescent lighting.

Do not allow the paper to come into contact with the following:

- Carbon and carbonless forms
- Wet-type diazo copy paper
- · Chart papers or adhesives containing Tributyl-phosphate
- Dibutyl-phosphate or other organic solvents
- Envelopes or folders composed of plastics containing plasticizers
- Solvents or solvent-containing products, which include Alcohol, Ketones, Esters, Ethers or derivates from this chemical group
- Petroleum solvents like Gasoline. Toluene or Benzene
- Greasy substances like Lanolin (e.g., Hand-lotion), Lard, Butter Oil or Vegetable Oil.
- · Any heat source.

9.4 Print speed and duration

Print speed is selectable at 1, 2 or 3 cm/minute according to user preference or local clinical practice. Total running times with a standard 45m pack of Sonicaid paper are as follows:

Speed	Running Time	
1cm/minute 2cm/minute 3cm/minute	75 hours 37.5 hours 25 hours	

Note

The Print Speed can only be changed through the Secure Settings menu. (See Section 15.5).

9.5 Changing paper packs

Paper packs generally have a pre-printed coloured marker to alert the user that the paper is about to reach the end of its duration. With the Sonicaid paper this starts at approximately 1 metre before the end of the pack, giving 30-100 minutes notice of paper end. Use this time to unwrap and prepare a new pack ready for printing.

When the paper end is reached, the printer will stop. The printer icon on the control bar will change to Print information will be stored in memory for up to 100 hours to allow the paper pack to be changed. Follow the procedure described below for changing the paper pack.

Once a new pack of paper has been installed and the paper tray pushed home, the print icon will return to and the stored data will be printed at a quick rate until the buffer is empty. Then it will revert to printing live data.


Finally, ensure that at least one fresh pack of paper is available to replace the old one when it comes to an end.



- The printer buffer is cleared if the unit is turned off, or in the event of a power failure.
- To avoid contact with sharp edges, do not insert hands inside printer aperture.

9.6 Loading printer paper

When the printer tray is opened, a help screen displaying the following diagram is shown. The screen may be closed by closing the paper tray or bypassed using the back button.

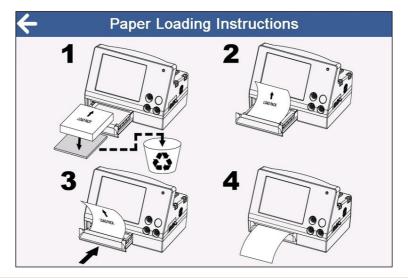

Note: Ensure the paper remains centrally aligned while closing the drawer.



The screen automatically returns to normal operation when the tray is closed but this is not an indicator that the tray is FULLY closed. Always ensure it is fully closed by checking that the front face of the paper tray is flush with the front face of the surrounding case.

9.7 Using non-Sonicaid paper

We strongly recommend the use of standard Huntleigh paper. There are many advantages to our plain paper including:

- 100% trace registration accuracy
- · No risk if inserted the wrong way up (this can result in mis-interpretation and poor outcomes
- Pack size is 3x length of GE/Philips packs less likely to run out during a labour and requires less frequent replacement
- High quality copying for case review, referral, training and legal cases (pre-printed colour grids may not copy clearly)
- High quality paper . Note there are many suppliers of cheap paper these can result in image drop out, reduced storage life, increased print-head wear and accumulation of debris on the head.

IMPORTANT: As paper tracks through a printer mechanism it will move from side to side due to variations in paper and printer mechanism alignment. This is an unavoidable feature of all printers of this type, as used in all makes of fetal monitors. With plain paper, where the grid is printed at the same time as the trace data, any alignment error is eliminated, ensuring 100% print accuracy. With pre-printed paper, this error cannot be eliminated and will result in alignment errors between the trace and the grid.

However, it is recognised that some users will have a preference for pre-printed paper. This section details the procedure for using such papers. Users must be aware of, and accept, the limitations as detailed above in using such paper.

The following actions are necessary in order to use the Team3 with non-Sonicaid paper:

- Change the paper tray, following the instructions supplied with the tray.
- Change the Team3 paper settings (See Section 15.5).


Note: The use of pre-printed graticuled paper disables 'twins side-by- side' trace printout.

The following alternative paper trays are available as accessories:

- Philips paper tray
- GE Corometrics paper tray

9.8 Sample Trace (Sonicaid paper)

The illustration below is of an actual CTG chart.

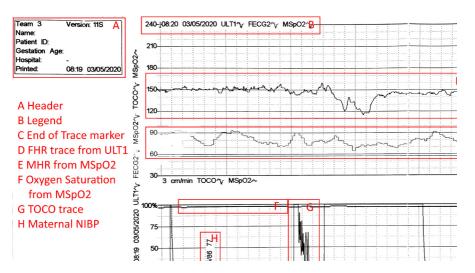

9.9 Turning off the printer

9.9.1 Normal recording

Touch the Green printer button . The button will flash while the printer's buffers are cleared and become grey when the printing has stopped.

Touch the Green printer unavailable button . If the paper has run out, the following screen will appear.





9.9.2 Stopping the printer while Dawes-Redman analysis is running

If the Dawes-Redman CTG analysis has not yet met the criteria, stopping the printer will result in the analysis being invalidated.

Touch the Green printer button . The following screen will appear.




If the paper has run out, touch the Green printer unavailable button . The following screen appears.





9.9.3 Stopping the printer while print timer running

If the print timer is available this will show as an overlay on the print button

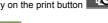

When the printer is active this will show as follows



If you attempt to stop the printer before the print timer expires, the following screen will be displayed.





10. Sonicaid Trend

10.1 Introduction

Sonicaid Trend is a software option available with all Team3 series monitors. It measures fetal heart rate parameters at regular intervals, and describes the trace in a way that is quantitative and not qualitative. Trend is not intended as a replacement for skilled visual interpretation of the trace, but it does help long-term changes in the fetal heart rate pattern to be assessed.

Note: Sonicaid Trend is ON by default on Intrapartum monitors (Team3I).



- Caution: Trend is valid only during the first stage of labour.
- The trace Trend data provided by the Sonicaid Trend is intended to assist, not to replace, the physician's visual assessment of a trace.

No guidelines on interpretation or limits of normality are provided, but the clinician can use the numeric values to identify and quantify the relative changes in fetal heart rate parameters over a period of time.

Numerical description of the trace allows direct comparison between traces. It also provides training support for trace interpretation, and readily available data for clinical research projects.

IMPORTANT

Trend provides numeric and objective trending information on key FHR trace parameters only. It does not provide any form of trace interpretation. Interpretation and diagnosis of the record remain the responsibility of the appropriately qualified medical staff.

10.2 Sonicaid Trend

Trend measurements are performed at 15 minutes, and every 15 minutes thereafter. It fits a baseline using the last 60 minutes of fetal heart data collected, then calculates the following parameters:

- Baseline heart rate (bpm) for the last 60 minutes
- Baseline heart rate (bpm) for the last 15 minutes
- Deceleration size (beats) for the last 60 minutes
- Deceleration size (beats) for the last 15 minutes
- Short term variation(ms) for the last 60 minutes

Confidence Indicator

Trend provides a confidence indicator showing the reliability of the baseline fit, and hence the fetal rate parameters. Confidence is shown as High, Medium or Low (H, M or L).

If the confidence indicator is Medium or High, the results reliably reflect the fetal heart rate pattern. If the confidence indicator is Low, interpret the results in relation to the appearance of the trace. Use them only if they are considered to be a sensible reflection of the visually assessed pattern.

10.3 Sonicaid Trend results

Printed and Displayed Results



The parameter values and confidence indicator are printed on the contractions section of the trace.

60 minute values are available after the first hour. Until then the results show 'NA'.

Signal Loss

If signal loss is >50%, the results will show 'SL'.


10.4 Viewing Sonicaid Trend data

When Printing, Recording or Viewing a CTG

If Trend results are available in any of these modes of operation, the Trend button in the Control Bar will appear Green. Touching this button will display Trend Results associated with the CTG.

TREND data can be viewed either in numeric table form or in graph views.

The graph views are particularly powerful in alerting clinicians to long term trends which are easily missed and can highlight significant clinical issues - an application note further detailing this function is available from your supplier.

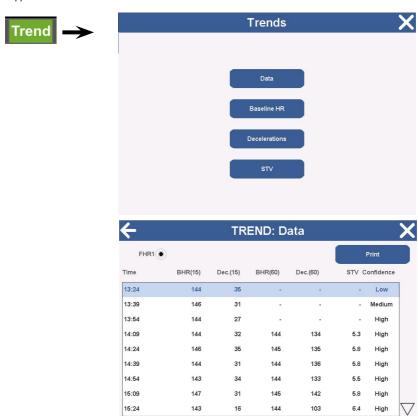



11. Dawes-Redman Antepartum Analysis

11.1 Intended Use

The intended use of Dawes-Redman analysis is to analyse clinically indicated antepartum CTGs in pregnancies from 26 weeks gestation onwards. It can be used on women who are experiencing Braxton-Hicks contractions but it is not intended for use in latent or established labour as the fetus is then exposed to additional factors such as labour contractions, pharmacological agents and epidural anaesthesia.



The analysis provided by Dawes-Redman is intended to assist, not to replace the physician's visual assessment of a trace.

As such, Dawes-Redman analysis is not a diagnosis, but an aid to clinical management. Diagnosis remains the responsibility of an appropriately qualified physician. Indeed, both the physician's visual assessment of the trace and the analysis provided by Dawes-Redman should be considered within the context of a full clinical assessment before decisions are made regarding management. Such a clinical assessment may include further tests such as umbilical blood flow velocity waveforms or biophysical profiling.

11.2 Overview

Dawes-Redman analysis is a software option available with all Team3 series monitors. The software tests fetal heart rate parameters against the criteria which define a normal record. Abnormalities are highlighted.

The analysis integrated into Team3 is a full implementation of the latest, most powerful, version of the world-renowned Dawes-Redman CTG analysis.

IMPORTANT

Interpretation and diagnosis of the CTG record remain the responsibility of the appropriately qualified medical staff.



The Dawes-Redman analysis is not valid during latent or established labour.

11.3 The Dawes-Redman Criteria

The Dawes-Redman criteria have been developed by Dawes, Redman et al at Oxford University over many years based on a growing database - the largest of its type in the world. It is a unique evidence based approach to CTG interpretation designed to replace the traditional visual interpretation based on highly subjective opinion, which is subject to high inter- and intra-observer variation. Studies have shown that this subjective process is associated with poor outcomes.

The Dawes-Redman CTG analysis replaces this with objective measurement of a wide range of trace features, which are then checked against a powerful algorithm derived from the large Oxford database. The analysis report states whether the criteria is met or not met. For further details on the clinical application of the analysis, contact your supplier.

11.4 Dawes-Redman Analysis

Note

- Ensure that the manual fetal movement event marker is plugged in and working for singletons only.
- Dawes-Redman analysis does not take account of automated fetal movements.
- · The automatic fetal movement function must be disabled while running Dawes-Redman analysis.
- · Dawes-Redman analysis is ON by default on Antepartum monitors (Team3A).
- Dawes-Redman analysis does not take account of fetal movements when analysing twins.
- · Dawes-Redman analysis does not support triplets.

The first analysis result is reported after 10 minutes of good quality CTG data. It is then updated every 2 minutes, up to a maximum of 60 minutes. The analysis fits a baseline to the fetal heart rate data collected so far, and from this measures accelerations and decelerations. Short-term variation is calculated, and episodes of high and low variation looked for.

The analysis can be stopped once the criteria have been met. Team3 produces a report of the analysis results at the end of the trace. Abnormalities are highlighted. If the analysis is not stopped, it is possible for the results to change to CRITERIA NOT MET. As more data is received, a subsequent analysis may re-fit the baseline so that, for example, an episode of high variation is no longer above the first centile.


The system then compares the calculated results with the Dawes-Redman criteria.

- If the analysis is stopped prior to 10 minutes, there are no analysis results.
- If the analysis is stopped between 10 and 60 minutes and the Criteria are MET, the system prints and displays the message Dawes-Redman Criteria Met as well as all of the measurement parameters.
- If the analysis is stopped between 10 and 60 minutes and the Criteria are NOT YET MET, the system prints and displays the message, Dawes-Redman analysis invalid because Analysis stopped prematurely. The measurement parameters are also available.
- If the analysis continues for a full 60 minutes and the Criteria are still NOT MET, the system prints and displays the message, Dawes-Redman Criteria Not Met with the Reasons for the failure to meet the criteria. The measurement parameters are also available.
- Analysis does not continue past 60 minutes.

11.5 Using Dawes-Redman analysis

Starting Dawes-Redman analysis

Dawes Redman must be enabled in Analysis Settings in order for the Dawes-Redman analysis button to be displayed.

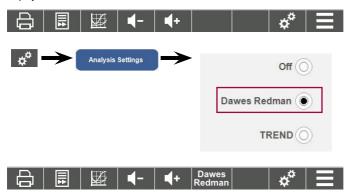

Note

- Ensure only 1x ultrasound transducer is plugged in unless monitoring twins. If a second ultrasound transducer is left plugged in, but not used, this will affect the analysis.
- · Ensure gestation age is set in Patient Details.

In order for the Dawes-Redman analysis to be started, a series of conditions must be satisfied. Failure to satisfy any of these conditions will result in a blocked Dawes-Redman analysis button.



When pressed, a screen indicating the corrections required will be displayed. See below a full list of all possible reasons why the Dawes-Redman analysis cannot be started and the corresponding screen.

Dawes Redman Information

- Gestational age is not set.
- · No FHR probe is connected.
- Recording Timer is enabled.
- Invalid probes connected.
- Analysis does not support triplets.
- Analysis is not indicated for use with FECG.


Analysis can not be run because:

- Gestational age is not set.
- No FHR probe is connected.
- Recording Timer is enabled

Start the printer or recording to start analysis. The CTG will contain the message 'Dawes-Redman Started' and the Dawes-Redman button will turn Light Purple.



Analysis Button	Description
	The Dawes-Redman analysis has not been enabled in Analysis Settings.
Dawes Redm	The Dawes-Redman analysis cannot be started due to one of several reasons.
Dawes Redman	The Dawes-Redman analysis can be started.
Dawes Redman	Prior to 10 minutes the Dawes-Redman button will be Light Purple.
Dawes Redman	Between 10 and 60 minutes, if the Criteria are not yet met, the Dawes-Redman button will be Dark purple.
Dawes Redman	After 60 minutes, if the Criteria are not met, the Dawes-Redman button will be Cyan.
Dawes Redman	Between 10 and 60 minutes, if the Criteria are met, the Dawes-Redman button will be Green.

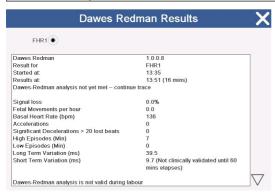

Stopping Dawes-Redman analysis

Stop recording or printing to stop analysis. The CTG will contain the messages 'Dawes-Redman Criteria Met', Dawes-Redman CTG analysis invalid' or 'Dawes-Redman Criteria Not Met'.

11.6 Dawes-Redman Analysis report

When the analysis is stopped, the printer produces a report of the analysis results at the end of the trace. The report shows:

- · Values for the calculated parameters
- · When the Dawes-Redman criteria were first met
- Whether the Dawes-Redman criteria were met at the time the analysis was stopped
- Abnormalities

Dawes Redman	1.0.0.8
Result for	FHR1
Started at	12:51
Results at	13:51 (60 mins)
Dawes-Redman criteria met at 60 m	ninutes.
Signal loss	1.7%
Fetal Movements per hour	0.0
Basal Heart Rate (bpm)	132
Accelerations	25
Significant Decelerations > 20 lost b	eats 0
High Episodes (Min)	39
Low Episodes (Min)	10
Long Term Variation (ms)	55.5
Short Term Variation (ms)	9.1
Dawes-Redman analysis is not valid	during labour
This is NOT A DIAGNOSIS.	

Team3 shows the last calculated values for

- Signal Loss
- Fetal movements per hour
- Basal heart rate
- Accelerations
- Decelerations
- High episodes
- Low episodes
- Short term variation

Reasons for not meeting the criteria

If the criteria were not met, the reasons are included on screen and in the printout. Possible reasons are:

Reason	
Basal heart rate outside normal range	
Large decelerations	
No episodes of high variation	
No movements and fewer than 3 accelerations	
Baseline fitting is uncertain	
Short-term variation is less than 3ms	
Possible error at the end of the record	
Deceleration at the end of the record	
High-frequency sinusoidal rhythm	
Suspected sinusoidal rhythm	
Long-term variation in high episodes below acceptable level	
No accelerations	

Abnormalities

Double asterisks indicate that the criteria have not been met due to one or more of the following conditions:

- Fetal heart rate < 116 bpm or > 160 bpm on a record of less than 30 minutes
- Decelerations > 100 lost beats (> 20 lost beats on a record of less than 30 minutes)
- No moves and fewer than 3 accelerations
- No episodes of high variation
- Short term variation < 3ms
- No accelerations and
 - either < 21 movements per hour or long term variation in episodes of high variation below the tenth centile
- · Long term variation in episodes of high variation below the first centile

A single asterisk indicates one of the following conditions:

- Short term variation < 4ms. but ≥ 3 ms
- Basal heart rate < 116 bpm or > 160 bpm on a record ≥ 30 minutes
- · Decelerations present, but not meeting the criteria for size of record length

A single asterisk does not necessarily mean that the record cannot pass the criteria. If all other parameters are normal at the 30 minute point, the abnormality could be within acceptable limits to meet the analysis criteria.

Basal heart rate warnings

A basal heart rate of 115 bpm or lower triggers a printed warning:

WARNING: LOW BASAL FHR
CHECK THAT FHR DOES NOT CONTINUE TO FALL
FETAL MOVEMENTS PRESENT? SINUSOIDAL RHYTHM?

Baseline definition

Baseline fetal heart rate is the average fetal heart rate (FHR) rounded to increments of 5 beats per minute during a 10-minute segment, excluding periodic or episodic changes, periods of marked variability, or baseline segments that differ by more than 25 beats per minute.

Basal definition

The basal or resting heart rate is defined as the heart rate when a person is awake, in a neutrally temperate environment, and has not been subject to any recent exertion or stimulation, such as stress or surprise.

12. Using Team3 with a CRS System

The Team3 can be connected to the following PC-based Central Record Systems:

- Sonicaid FetalCare
- Sonicaid Centrale



The Team3 has been validated for use with the listed Huntleigh Software systems. Other manufacturers' systems using the industry standard HP50 / Philips communications protocol Version A.03.00 should also work but may not have been validated - contact Huntleigh for details.

12.1 Connecting Team3 to Sonicaid FetalCare and Sonicaid Centrale

- Connect the Sonicaid FetalCare connecting lead to the RS232 connector on the rear of Team3.
- 2. Refer to the connection instructions supplied with your Huntleigh or other OEM CRS system.
- 3. Select the relevant communication protocol in the Central Monitoring Screen.



13. Trouble Shooting

This section gives some of the more common problems encountered during use together with possible causes. If the problem cannot be located after consulting the table in this section, the Team3 should be switched off, disconnected from mains power source and a qualified technician should be consulted. Before attempting trouble-shooting, verify that the power cable is properly connected to both the Team3 and the mains power source.

13.1 FHR

SYMPTOM	POSSIBLE CAUSE / REMEDY
No FHR signal displayed	Check Team3 is switched on.
	Check the FHR transducer is connected.
High % signal loss	Check transducer placement.
	Check the transducer is not damaged.
	Consider switching from Ultrasound to FECG.
No FHR trace printed	Check Print button has been pressed.
	Check there is paper in the paper tray.
	Check paper tray is fully pushed in.
Only one trace (twins) OR Traces superimposed (twins)	Check 'Printer Offsets' in Printer setup. See Section 5.3.7
No beep when button pressed.	Check sound setting. See section 5.3.7.
Alarm not working	Alarm may be turned off. See Section 5.3.7
	Team3 not printing/recording.

13.2 Oximetry

SYMPTOM	POSSIBLE CAUSE / REMEDY
No signal appears when the oximetry	Check that cable is properly connected to monitor.
sensor is connected OR	Check connections between cable and sensor.
Signal disappears after some time of monitoring	Check finger properly inserted.
monitoring	Nail varnish can interfere with readings – try own finger.

13.3 Fetal event marker

SYMPTOM	POSSIBLE CAUSE / REMEDY
No mark appears on the trace when the	Check event marker is connected
mother presses the event marker.	Check enough time has elapsed since button last pressed.
Team3 does not beep when the mother	Check event marker is connected
presses the event marker	Check sound setting. See section 5.3.7.

13.4 Maternal blood pressure

SYMPTOM	POSSIBLE CAUSE / REMEDY
No reading reported.	Check cuff and hose, then try another measurement.

13.5 Printing

SYMPTOM	POSSIBLE CAUSE / REMEDY
Paper runs out	A coloured stripe will appear when the paper pack nears its end (Sonicaid paper). Once the paper has expired, the printer icon on the control bar will change to . Print information will be stored in memory for up to 100 hours to allow the paper pack to be changed.
Poor print quality	1. Make sure the correct paper is loaded. 2. Make sure the paper is loaded correctly. 3. Make sure the paper tray is fully pushed in. 4. Try printing again. 5. If there is no improvement, clean the print head. See Section 16.
Printer stops working	Check paper supply and feed. If not successful, swap unit out. Trace data is stored in memory.

13.6 General

SYMPTOM	POSSIBLE CAUSE / REMEDY
Unit locks up, is unresponsive or is unable to switch off	Maintain contact on the on/off sense button until the unit shuts down - this may take 15-20 seconds.

In the unlikely event that Team3 operation is interrupted, the monitor will automatically restart.

Following a restart, all previously configured settings and operating modes will be retained and the monitoring function will resume as normal.

If multiple restarts occur, the monitor will perform a full reset. In this event, the display will go blank, closely followed by a splash screen whilst the monitor reboots.

This may take up to 40 seconds after which the monitoring function will resume as normal.

If this is deemed inconvenient, please contact your supplier.

14. Care and Cleaning

14.1 General Care

All Huntleigh products have been designed to withstand normal clinical use, however they can contain delicate components, for example the ultrasound transducer, which should be handled and treated with care. Periodically, and whenever the integrity of the system is in doubt, carry out a check of all functions as described in the relevant section of the IFU. If there are any defects to the housing contact Huntleigh or your distributor for repair or to order a replacement.

Λ

WARNING

- Check with your facility's local infection control policy and medical equipment cleaning procedures.
- Observe warnings and guidance on cleaning fluid labelling regarding use and personal protective equipment (PPE).
- Always switch off the monitor and disconnect from the AC supply before cleaning and disinfecting.
- · Do not use abrasive cloths or cleaners.
- Do not use automatic washers or autoclaves.
- Do not use phenolic detergent based disinfectants, solutions containing cationic surfactants, ammonia-based compounds, perfumes or antiseptic solutions such as Sterisol or Hibiscrub.
- If detergent or disinfectant wipes are used ensure that excess solution is squeezed from the wipe prior to use.
- Do not allow any fluid to enter the products and do not immerse in any solution.
- Always wipe off disinfectant using a cloth dampened with clean water.

14.2 General Cleaning and Disinfecting

Always keep the external surfaces clean and free of dirt and fluids using a clean dry cloth.

- 1. Wipe any fluids from the surface of the product using a clean dry cloth.
- 2. Wipe with a cloth dampened in 70% Isopropyl Alcohol.
- 3. Completely dry with a clean, dry lint free cloth.
- 4. If the product has been contaminated use the methods described for patient applied parts.

14.3 Cleaning and Disinfecting Patient Applied Parts

Clean the applied parts before examining a patient using low risk cleaning method below. Following patient examination, clean and/or disinfect the applied parts by the appropriate method based upon the level of cross contamination risk, as defined below:

Risk	Definitions	Procedure
Low	Normal use or low risk situations include patients having intact skin and no known infection and the probes have not been contaminated with blood.	Remove soiling, wipe with a mild neutral detergent and then wipe with a cloth dampened in water. Completely dry with a clean lint free cloth.
Medium	The patient has a known infection, skin is not intact, the part is heavily soiled.	Follow low risk procedure then wipe with a cloth dampened in Sodium Hypochlorite (1,000ppm). After two minutes wipe with a cloth dampened in water and then dry with a clean lint free cloth.
High	This procedure should only be used when the part has been contaminated by blood.	Follow low risk procedure then wipe with a cloth dampened in Sodium Hypochlorite (10,000ppm). After two minutes wipe with a cloth dampened in water and then dry with a clean lint free cloth.



WARNING

Repeated and unnecessary use of concentrated solutions will result in damage to the product. Do not allow Sodium Hypochlorite solutions to come into contact with metal parts.

The use of disinfectant materials, other than those listed, is the responsibility of the user for their efficacy and compatibility with the device.

Approved Products		DO NOT USE	V
LINGET ANIOS	•	SURFA'SAVE	
WIP'ANIOS Excel		Surfanios Premium	
Clinell Alcohol Wipes (Red)			
Clinell Alcohol Wipes Plus+ (Red)			'
Clinell Universal Wipes (Green)			'
Clinell Universal Spray (Green)			'



WARNING

After using chemicals ALWAYS rinse off / remove the chemical with absorbent material, dampened in clean water and dry with a clean cloth.

14.4 NIBP Cuff and Maternal Oximetry Sensor

For cleaning and disinfection, refer to instructions supplied by the manufacturer.

14.5 Transducer Belts

Re-useable belts can be hand-washed at 40°C maximum using a washing powder or mild detergent solution following the detergent manufacturer's guidance. Rinse with clean water and dry without using heat.

Single use disposable belts are designed for single patient use only and should not be washed. These are distinguished from re-useable belts by colour (white) and include orange SONICAID branding.

15. Maintenance



Warning

It is very important that all instructions in the Maintenance section are followed carefully.

15.1 User maintenance

The checks below can be performed by any user of the equipment.

Mechanical inspection

Every three months:

- Inspect the AC supply cable, transducers, and all other assemblies and connectors for loose or broken parts, or any other damage.
- 2. Pay particular attention to the AC supply socket.
- 3. Look carefully for cracks which may allow the ingress of liquids or gels.
- 4. Replace any broken or damaged transducers or cables.
- 5. If there is damage to the main Team3 unit, contact your local Huntleigh Healthcare Ltd representative.

Cleaning the print head on the printer

- 1. Pull the paper tray out as far as it will go.
- 2. Remove the paper pack.
- Using a lint-free cloth and pure alcohol, wipe along the full width of the print head, which is beneath the plastic edge of the paper compartment.
- 4. Replace the paper tray and paper pack.

Check NIBP cuffs and hose

Once a month:

- 1. Check the NIBP hose. Straighten out any kinks and distortions.
- 2. Check the cuff(s) for wear and damage.

Check oximetry sensor

Once a month:

Check the oximetry sensor for any signs of wear or damage.

If damage is identified do not use the device. Contact the manufacturer for more information.

15.2 Technical maintenance

Refer to your Service department for details of technical maintenance and support.

15.3 Corrective maintenance

All corrective maintenance must be performed by qualified engineers approved by Huntleigh Healthcare Ltd. The Sonicaid Team3 Service Manual (order part number 777490) is designed as an aid to engineers in

maintenance and service of repairable parts.

15.4 Servicing

Servicing should be performed only by Huntleigh Healthcare Ltd or their appointed service agent. If you have difficulty obtaining service for Team3, contact Huntleigh Healthcare Ltd.



WARNING

Do not attempt service while the fetal monitor is in use.

15.5 Secure Settings



WARNING

The Secure Settings menus should be accessed by authorised personnel only.


Touch



to access the Settings menu.



The operator will need to enter a 5 digit code via the touchscreen, (default code 1 2 3 4 5), to enter the Secure Settings Menu.

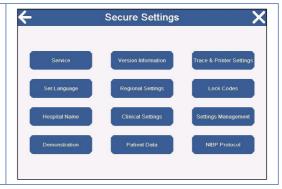

Service Sub Menu



Service menu options are for use by trained biomedical staff only.

Enter a 5 digit code via the touchscreen, (default code 5 5 5 5 5), to enter the Service Menu.



Licencing

For service use only. Allows additional features to be enabled with a valid license key.



NIBP Calibration

For service use only. Allows qualified biomedical engineers to calibrate the fetal monitor's NIBP system.




Recordings Manager

This button is only available once traces are selected. Select each trace to Export.


- The Export button allows traces to be moved from internal Team3 storage to a USB drive and kept for future viewing if required. Exporting traces from Team3 to a USB drive deletes the selected traces from the Team3. The USB drive capacity requirement is 8GB and the recommended suppliers are Transcend and SanDisk.



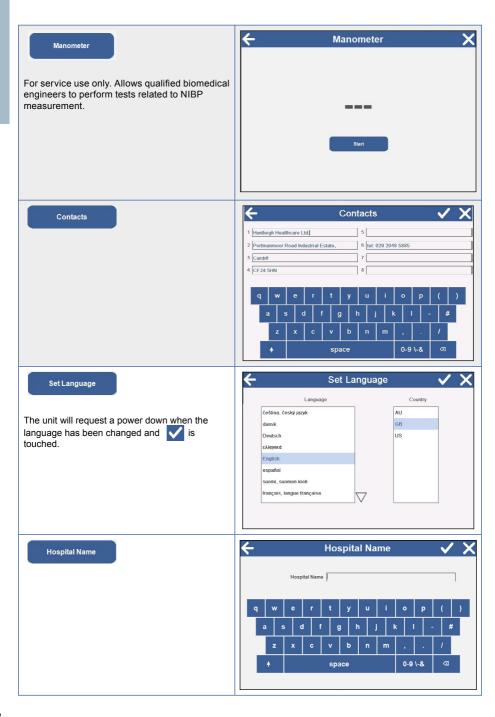

Demonstration

Allows the system to be used in demonstration mode. Plays a previously recorded CTG in a continuous loop until this dialogue used to turn it off. Requires the power to be cycled off and on.

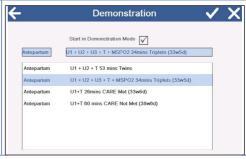


Click on one of the demo traces - this will enable an antepartum demo mode. Switch unit off/on to activate. Alternatively, selecting the tick box will run an intrapartum demo mode. To disable demo mode switch the unit off/on.





Regional Settings

Changing the timezone allows for daylight savings to be implemented. The unit will request a power down when is touched.

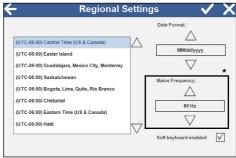


* Mains Frequency Setting

The default setting for the mains frequency on this product is 50Hz.

Touch \triangle ∇ to select required frequency.


Touch to confirm

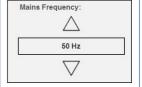

Clinical Settings

The clinical settings screen allows authorised users to change the following (the factory default settings are shown):

- The alarm icon type displayed on screen
- Whether to record alarms only when recording/printing
- Whether to measure NIBP during Inflation or Deflation

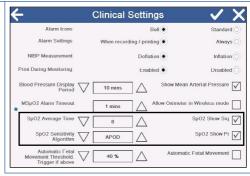

- Print During Monitoring Enable(default) or Disable. When disabled, the print Icon on the diagnostic screen will be replaced with a record Icon. No printing will occur when recording. Printing will still be available in sub menus where applicable e.g. printing a pre-recorded trace
- · How long to display the previous blood pressure reading
- Whether to include Mean Arterial Pressure (MAP) on the blood pressure display
- The timeout period for the Msp02 alarm
- · Whether to allow oximetry in wireless mode
- * Masimo SpO2 Only Adjust the sensitivity averaging time (for details see Appendix 6 Averaging Time)
- * Masimo SpO2 Only Adjust the sensitivity algorithm setting (for details see Appendix 6 Sensitivity Algorithm)
- * Masimo SpO2 Only Enable or Disable the Siq bar graph on the main display (for details see Appendix 6 Siq Bar Graph)
- * Masimo SpO2 Only Enable or disable the Pi Indication on the main display (for details see Appendix 6 Perfusion Index)
- · Sets the sensitivity threshold for the automatic Fetal movement and enables or disables the feature.

Use \triangle or ∇ to set the threshold as required. The required threshold may depend on whether the trace is showing a high incidence of artefact. It is recommended to set the threshold between 40-60%.

Patient Data

Allows these functions to be enabled/disabled.

- Patient Data: Allows entry of patient identification data into the monitor. The patient's ID appears at the top of the monitoring screen and on the paper printouts and stored recordings (if Recordings is also enabled).
- Easinotes: Allows the user to add annotations to the tracing when the fetal monitor is printing/ recording, using the Annotations icon to view the EasiNotes selection screens.



Recordings: The fetal monitor records the patients' traces while they are being printed. Recorded traces
can be viewed later if desired.

Note: If 'Recordings' is not checked, the traces can still be printed, but they will not be stored in the monitor for review.



This button is not available while printing is in progress.



Trace and Printer Settings Sub Menu





Printer Paper

Non-Sonicaid papers require a non-standard paper tray to be fitted



Lock Codes

Allows the lock codes to be changed to values other than the factory settings:

Secure Settings Code: 12345


Unlock Code: 00123

Service Code: 55555

Patient Data Code: 98765

Note: It is the hospital's responsibility to keep track of any lock code changes. Forgotten or lost codes cannot be reset.



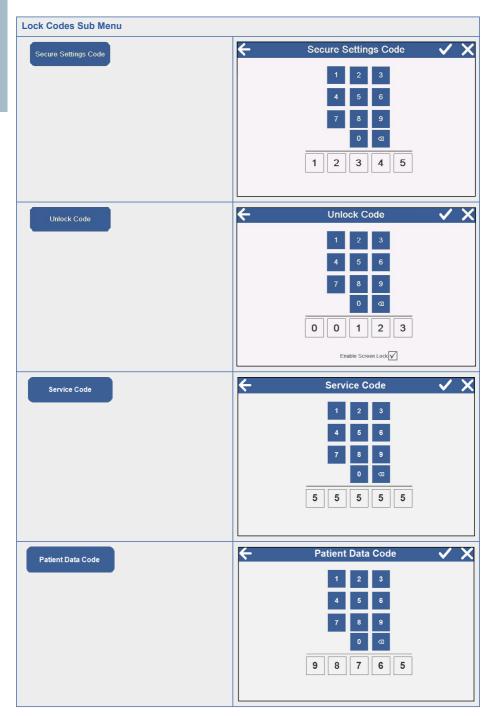

Settings Management

Save New Defaults: Fixes all current settings as defaults.

Restore factory Settings: overwrites any Hospital customised default settings with the Team3 Huntleigh factory default settings

Imports and Exports allow transfer to and from Team3 via USB Flash Drive.*




Note

- Do NOT transfer settings files from one monitor to another if the software versions are not the same.
- Import/Export buttons are only displayed when a USB Flash Drive is installed.
- *A software tool is available from your supplier to support the Easinote function. See section 15.6.



Allows NiBP protocol details to be customised.

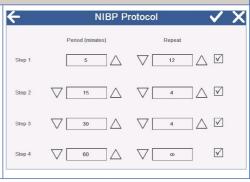

15.6 Customising Easinotes



WARNING

The Secure Settings menus should be accessed by authorised personnel only.


The Easinote sub-system is very flexible allowing up to 12 groups of 12 notes to be configured on Team3. Refer to Section 15.5 for details on how to change the Language and to access the Settings Management feature

Exporting Easinotes

- 1. With Team3 switched on, plug a USB flash drive into one of the Team3 USB sockets.
- Set up Team3 to operate in the language of your choice. This will ensure that the Easinote file to be exported is saved with the other files for that language. It is important to remember that each language has its own Easinotes file so Easinotes will change with Language selection.
- 3. Enter the Settings Management screen.
- 4. Touch the Export EasiNotes button to copy the current language Easinotes to the USB Flash Drive.
- 5. Exit the menu and remove the USB flash drive.

Customising Easinotes

- Contact Huntleigh Service and get a link to download the Easinotes Editing tool.
- 2. Install the tool and run it. (See image below).
- Open the Easinotes.hcf file on the USB Flash Drive, exported from your Team3.
- On the left of the tool is shown each of the Categories (See section 5.3.6.).
 - The buttons below allow new categories to be created, other categories to be deleted and their relative positions changed in the list.
- On the right of the tool is shown each of the notes or the selected Category. The buttons below allow new notes to be created, other notes to be deleted and their relative positions changed in the list.

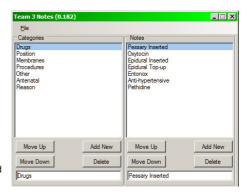

- At the bottom of the tool, the 2 text boxes allow the selected Category or Note to be edited. These text boxes allow text in any Windows language to be used, so for instance, a full set of French notes could be assembled.
- 7. When editing is complete, save your work, overwriting the original file.

Importing Easinotes

- With Team3 switched on, plug the USB flash drive containing your edited Easinotes.hcf file into one of the Team3 USB sockets.
- Team3 must already be set up to operate in the language of your choice. This will ensure that the Easinote file to be imported is saved with the other files for that language.
- 3. Enter the Settings Management screen.
- 4. Touch the Import EasiNotes button to copy the Easinotes file from the USB Flash Drive.
- 5. Exit the menu and remove the USB flash drive.
- If possible, send the Easinotes.hcf file that you are now using to Huntleigh so that it can be included in later software releases.

16. Specifications

16.1 Equipment Classification

Protection against electric shock.	Class 1		
Applied Parts	Type CF - Ultrasound Probes /TOCO/ FECG/MECG Type BF - Maternal NIBP/MSpO2/fetal event marker		
Mode of operation.	Continuous		
Degree of protection against harmful ingress of particles and/or water.	Main Unit: IP30 when Fixed or Stationary. IP32 with protective cover used when moving product Ultrasound and Toco: IPX7 Other transducers: Not protected		
Suitability for use in an oxygen rich environment.	Not suitable		

16.2 General

Rated Supply Voltage	100-230V AC	
Fuse Type	2 x T3.15AH 250V	
Power Input	50-60Hz 8-133VA	
Battery (optional) 14.4V Lithium Ion Battery Pack		
Real time clock battery	Panasonic CR2032/BN 3V lithium	
Size Width 318mm, Height 230mm, Depth 237mm		
Weight	5.7Kg (with Printer)	
Service Life	7 years	

16.3 Environmental

Operating		Storage
+10°C to +40°C	Temperature range -10°C to +40°C	
10% to 90% (non condensing)	Relative Humidity 93% maximum	
86 kPa to 106 kPa	Pressure	86 kPa to 106 kPa

16.4 Transducers

Ultrasound

Range	30 to 240 bpm	
Accuracy	± 1 bpm over the range 100-180 bpm ± 2 bpm outside range	
Alarms	High: 150-200 bpm Low: 50-120 bpm Signal Loss: % loss in last 5 minutes	
Mode	Directional pulsed Doppler Repetition rate 3.0kHz	
Frequency	1.0MHz (green)	
P-	<30kPa	
lob	<1mW/cm2	
Ispta	<3mW/cm2	
Resolution	16 bits	
Safety	Type CF protection	
Ingress Protection	IPX7	
Standards	IEC60601-2-37 (Thermal Indices (TI) and Mechanical Index (MI) are <1.0 for all device settings)	

FECG

Range	30 to 240 bpm	
Accuracy	± 1 bpm over the range 100-180 bpm ± 2 bpm outside range	
Alarms	As Ultrasound Leads off alarm	
Input impedance	10M Ohm	
Input range	30μV to 500μV peak to peak	
DC offset	±2V common mode ±300mV differential	
Common mode range	±20V @ mains frequency	
Noise	<10µV peak-to-peak referred to input	
Safety	Type CF protection	

Uterine activity (external TOCO)

Range	0-100 relative units		
Sensitivity	80% (±5%) scale reading equivalent to 100g		
Offset range	±100g		
Auto zero	Manual and auto zero facility		
Safety	Type CF protection		
Ingress Protection IPX7			

Uterine activity (internal IUP)

Transducers	Intran Plus 400 / Koala® IPC5000C Or as detailed in the current Team3 Accessories and Consumables Brochure	
Pressure range	0-100 mmHg/0-13.3 kPa (user selectable)	
Sensitivity	5μV/V/mmHg	
Accuracy	±5%	
Safety	Type CF protection	

Maternal oximetry

Module	Masimo	NELLCOR (Rectangular Socket)	BCI (Round Socket)
Sensor types	Masimo 4050 DCI Adult finger sensor. Or as detailed in the current Team3 Accessories and Consumables Brochure	NELLCOR DS100A Or as detailed in the current Team3 Accessories and Consumables Brochure	BCI (Smiths Industries) 3444 / Unimed Soft Tip U4105-06 Or as detailed in the current Team3 Accessories and Consumables Brochure
Saturation range	1-100% MSpO ₂	1-100% MSpO2	0-99% MSpO2
Saturation accuracy	±1SD of normal distribution, within ranges: • 70-100%: ±2 digits displayed • 0-69%:unspecified	±1SD of normal distribution, within ranges: • 70-100% +/- 2 digits displayed • 0–69% unspecified	±1SD of normal distribution, within ranges: • 70-100% +/-4% measurement capability • 70-99% +/- 2 digits displayed • 0–69% unspecified
Pulse rate range	20-250 bpm	20-250 bpm	30-240 bpm
Pulse rate accuracy	±3 digits	+/- 3 digits	±2 bpm or ±2%, whichever is greater
Record/ display	On-screendisplay and printed record of: Maternal % SpO2 Heart rate Signal IQ Perfusion index Refer to Appendix 6 for additional messages	On-screen display and printed record of: Maternal % SpO2 Heart rate	On-screen display and printed record of: Maternal % SpO2 Heart rate
Safety	Type BF protection	Type BF protection	Type BF protection
Alarms	Low saturation: 85-99% MSpO2 High saturation: 86-100% MSpO2 Refer to Appendix 6 for additional alarms	Low saturation: 85-99% MSpO2 Signal loss	Low saturation: 85-99% MSpO2 Signal loss
Standards	ISO 9919	ISO9919	ISO9919

MECG

Range	30-240 bpm		
Accuracy	±1 bpm		
Alarms - High and Low Rate Signal Loss	High: 60-160 bpm Low: 30-90 bpm Leads off alarm		
Input Range	500μV to 5mV peak to peak		
Safety	Type CF protection		
Maximum update rate for displayed heartrate	80-120 bpm: 2 secs 80-40 bpm: 4 secs		
Heartrate calculation	Calculated from the mean of a maximum of 4 beat intervals. The display update rate is 4Hz.		
Standards	MECG is not provided as a diagnostic ECG function and is therefore not designed to meet all of the requirements of IEC 60601-2-27. Monitoring MECG allows a check to be made that the fetal heart rate being recorded does in fact belong to the fetus and not the mother		

Maternal blood pressure

Method	Oscillometric		
Pressure Range	0-300mmHg		
Measurement ranges	Systolic 25-280 mmHg Diastolic 10-220 mmHg Pulse 30-240 bpm		
Accuracy	Measurement during deflation during deflation inflation, IMT Required according to international standards		
Pressure transducer accuracy	±1 mmHg		
Measurement accuracy mean deviation	<1.7 mmHg		
Measurement accuracy standard deviation	<5.6 mmHg	<3.48 mmHg	max. 8 mmHg
Modes	Manual or automatic User-selectable interval in Auto Mode: 1, 2, 3, 5, 10, 15, 20, 30, 45, 60, 90 or 120 minutes		
Record / display	On-screen display and printed record of: Systolic blood pressure Diastolic blood pressure Pulse rate Mean arterial pressure		
Alarms	Systolic High: 100-180mmHg Systolic Low: 50-150mmHg Diastolic High: 70-130mmHg Diastolic Low: 40-120mmHg		
Safety	Type B protection Hardware and software controls to limit: Inflation (max. 300 mmHg) Measurement time (max. 90 s)		
Standards	EN 1060-3 , EN 1060-4 , EN 80601-2-30 , ANSI/AAMI SP-10 The sphygmomanometer was clinically investigated according to the requirements of ISO 81060-2		

Alarm characteristics

Alarm Sound Pressure Levels at 1m	Minimum 53db(A) Default 75db(A) Maximum 92db(A)
Alarm tone	3 pulses Pulse frequency = 311Hz Pulse duration = 170ms Rise time = 17ms Fall time = 28ms Inter pulse gap = 160ms Pulse amplitudes within 10% of each other Inter burst interval between 2.5s and 30s

16.5 Printer

Print head	128mm thick film
Resolution	8 dots per mm
Printer speeds	1, 2, or 3cm per minute (user selectable) 10 cm per minute fast forward
Paper	Plain thermal paper, z-fold, 45m length
FHR scales	30–240 bpm or 50–210 bpm (user selectable)
Annotation	Hospital name, time, date, paper speed, monitoring modes, signal loss Mother's name and ID number (optional)

16.6 Connections *

Front Panel

FHR1	1.0MHz ultrasound transducer / fetal ECG lead
FHR2	1.0MHz ultrasound transducer / fetal ECG lead
FHR3	1.0MHz ultrasound transducer / fetal ECG lead
тосо	Toco transducer/IUP lead **

Side Panel

MSpO ₂	Maternal pulse oximetry
NIBP	Maternal non-invasive blood pressure
MECG	Maternal Electrocardiograph using ECG electrodes

Interfaces

Telemetry	Sonicaid Wireless Telemetry
System	Sonicaid Centrale Sonicaid Fetalcare

Rear Panel

Mains Socket	Mains power
Fetal Event Marker socket	1/4 inch jack plug connection
Equipotential Earth Point	Provides common earthing point for connected equipment
RS232	Central Record System (CRS)
Auxiliary	Wireless telemetry system
DVI Socket	External display
USB Ports	External Keyboard, Barcode Reader, Touchscreen, Upgrader Memory Stick
Ethernet Port	Future CRS

* Depending on model ** Intrapartum Model only

16.7 Display

Technology	TFT Liquid Crystal Display (LCD)
Size	8.4" diagonal
Resolution	SVGA, 800 x 600
Viewing Angle	170°

Data display

ULT1, ULT2	Fetal heart rate (30–240 bpm) Pulse rate and confidence indicator
FECG	Fetal heart rate (30–240 bpm) Pulse rate
MECG	Maternal heart rate (30–240 bpm) Pulse rate
тосо	0–100 (relative units)
IUP	0–100mmHg or 0–13.3 kPa
MSpO ₂	Oxygen saturation Pulse rate
NIBP	Systolic and diastolic pressures Pulse rate MAP

16.8 Default Settings

Alarms

Loss of Signal	50%
Fetal Heart Rate	High - 160bpm for 3 minutes ON Low - 110bpm for 3 minutes ON
Toco Persistance Alert	50% for 5 minutes OFF
Maternal Heart Rate	High - 100bpm for 3 minutes OFF Low - 60bpm for 3 minutes OFF
Maternal Systolic Pressure	High -140mmHg OFF Low - 90mmHg OFF
Maternal Diastolic Pressure	High - 90mmHg OFF Low - 60mmHg OFF
Maternal Low Blood Saturation	94% OFF

Automatic Analysis

Dawes-Redman	OFF - a licence key can be purchased to activate this
TREND	OFF - a licence key can be purchased to activate this

Audio

FHR	6 (out of 20)
Touch	6 (out of 20)
Alarms	10 (out of 20)
Fetal Movement	10 (out of 20)
Communications protocol	HP50 over RS232
Automatic Movement Detect	40% OFF

NIBP

Auto Enable	OFF
Repeat Interval	5 minutes

View

Start Screen	Numeric
Background colour	Black

Timer

Non Stress Test Timer Period	10 minutes OFF
------------------------------	----------------

Printer

Vertical scale	20 bpm/cm	
Minor Vertical Scale	10 bpm	
Speed	1 cm/min	
Twins Print Grid	OFF	
FHR2 Offset	OFF	
FHR3 Offset	OFF	
Paper Type	Sonicaid	

Uterine Activity

Toco Zero Level	10%
Toco Auto Zero	ON
IUP Units	mmHg

Miscellaneous

Screen Lock Code	00123
Screen Lock Enabled	ON
Mains Frequency	50Hz
Alarm Icons	Bell
Date Format	dd/MM/yyyy
MSpO ₂ Alarm Timeout	1 minute
NIBP Valid Period	10 minutes
Show Mean Arterial Pressure	ON
Secure Settings Code	12345
Keyboard	ON
Language	en-GB

16.9 General Standards

IEC60601-1	ISO 15223-1	JIS T 0601-1
ANSI/AAMI ES60601-1	IEC60601-2-49	IEC60601-1-2
CAN/CSA C22.2 No 60601-1	IEC62304	

17. Accessories



Use only recommended accessories listed in this manual or in the Accessories and Consumables catalogue.

Please refer to the Accessories and Consumables catalogue included with the monitor for further details of products available for use with the Team3.

Use only the recommended accessories. See www.huntleigh-diagnostics.com for Sonicaid Fetal Monitoring Accessories & Consumables Catalogue (LIT 751348). The latest issue of this catalogue is available on request from local Huntleigh representatives. Available accessories, consumables and spares include:

Accessories

Item	Part No
Team3 PAPER TRAY – Phillips	ACC-OBS-077
Team3 PAPER TRAY – Corometrics (GE)	ACC-OBS-078
Team3 PAPER TRAY – Huntleigh	ACC-OBS-079
Trolley	ACC-OBS-072
Wall mounting Bracket	ACC-OBS-076
FECG Connecting Leads *	-
MECG Connecting Lead	ACC-OBS-070
IUP Catheter Connecting Lead *	-
NIBP Cuff (Various Sizes) *	-
Patient Event Marker	SP 7775-6901
Ultrasound, TOCO and MSpO2 Transducers *	-
Service Manual	777490
Team3 Protective cover	ACC-OBS-088

Consumables

Item	Part No
Aquasonic Gel (various Sizes) *	-
Sonicaid Paper packs * (standard - box 20)	ACC-321414
Transducer Belts *	-
Fetal ECG Electrodes and Leg Plates *	-
Maternal ECG Electrodes (box 300)	ACC-OBS-027
Disposable IUP Catheter Transducer *	-

^{*} See Accessories and Consumables catalogue for full range of options.

18. Warranty and Service

Huntleigh Healthcare Diagnostic Products Division standard terms and conditions apply to all sales. A copy is available on request. These contain full details of warranty terms and do not limit the statutory rights of the consumer.

Service Returns

If for any reason the Team3 has to be returned, please:

- Clean the product following the instructions in this manual.
- Pack it in suitable packing.
- Attach a decontamination certificate (or other statement declaring that the product has been cleaned) to the outside of the package.
- Mark the package 'Service Department '

For further details, refer to NHS document HSG(93)26 (UK only).

Huntleigh Healthcare Ltd reserve the right to return product that does not contain a decontamination certificate.

Service Department. Huntleigh Healthcare, Diagnostic Products Division, 35, Portmanmoor Rd., Cardiff. CF24 5HN United Kingdom.

Tel: +44 (0)29 20485885 Fax: +44 (0)29 20492520

Email: +44 (0)29 20492520
Email: sales@huntleigh-diagnostics.co.uk

service@huntleigh-diagnostics.co.uk www.huntleigh-diagnostics.com

Appendix 1 Electromagnetic Compatibility

Make sure the environment in which Team3 is installed is not subject to strong sources of electromagnetic interference (e.g. radio transmitters, mobile phones).

This equipment generates and uses radio frequency energy. If not installed and used properly, in strict accordance with the manufacturer's instructions, it may cause or be subject to interference. Type-tested in a fully configured system, complies with EN60601-1-2, the standard intended to provide reasonable protection against such interference. Whether the equipment causes interference may be determined by turning the equipment off and on. If it does cause or is affected by interference, one or more of the following measures may correct the interference:

- Reorienting the equipment
- Relocating the equipment with respect to the source of interference
- Moving the equipment away from the device with which it is interfering
- Plugging the equipment into a different outlet so that the devices are on different branch circuits



WARNING:

- The use of accessories, transducers and cables other than those specified, with the
 exception of transducers and cables sold by the manufacturer of the Team3 as
 replacement parts for internal components, may result in increased emissions or
 decreased immunity of the Team3.
- The Team3 should not be used adjacent to or stacked with other equipment and that
 if adjacent or stacked use is necessary, the Team3 should be observed to verify normal
 operation in the configuration in which it will be used
- Portable RF communications equipment (including peripherals such as antenna cables and external antennas) should be used no closer than 30 cm (12 inches) to any part of the Team3 including cables specified by the manufacturer. Otherwise, degradation of the performance of this equipment could result.

Guidance and Manufacturer's declaration - electromagnetic emissions

The Team3 is intended for use in the electromagnetic environment specified below. The customer or the user of the Team3 should assure that it is used in such an environment.

Emissions Test	Compliance	Electromagnetic Environment - guidance	
RF emissions CISPR 11	Group 1	The Team3 uses RF energy only for its internal function. Therefore, its RF emissions are very low and are not likely to cause any interference in nearby electronic equipment.	
RF emissions CISPR 11	Class A		
Harmonic emissions IEC 61000-3-2	Class A	The Team3 is suitable for use in all establishments, other than domestic and those directly connected to the public low-voltage power supply network that supplies buildings used for domestic	
Voltage fluctuations / flicker emissions IEC 61000-3-3	Complies	purposes.	

Guidance and Manufacturer's declaration - electromagnetic immunity

The Team3 is intended for use in the electromagnetic environment specified below. The customer or the user of the Team3 should assure that it is used in such an environment.

Immunity Test	IEC 60601 test level	Compliance level	Electromagnetic Environment - guidance	
			Portable and mobile RF communications equipment should be used no closer to any part of the Team3, including cables, than the recommended separation distance calculated from the equation applicable to the frequency of the transmitter.	
Conducted RF IEC 61000-4-6	3 Vrms 150kHz to 80MHz outside ISM bands ^a 6 Vrms 150 kHz to 80 MHz in ISM and amateur radio bands	3V	$d = 1.2 \sqrt{P}$ 150 KHz to 80 MHz	
Radiated RF IEC 61000-4-3	3 V/m 80MHz to 2.5GHz	3V/m	$d = 1.2 \sqrt{P}$ $d = 2.3 \sqrt{P}$ 80MHz to 800MHz 800MHz to 2.5GHz	
			where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer and d is the recommended separation distance in metres (m). ^b Field strengths from fixed RF transmitters, as determined by an electromagnetic site survey, ^c should be less than the compliance level in each frequency range ^d . Interference may occur in the vicinity of the $\begin{pmatrix} ((\bullet)) \\ \bullet \end{pmatrix}$ equipment marked with the following symbol:	
			equipment marked with the following symbol:	

NOTE 1 At 80MHz and 800MHz, the higher frequency range applies.

NOTE 2 These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.

- The ISM (industrial, scientific and medical) bands between 150 kHz and 80 MHz are 6,765 MHz, to 6,795 MHz: 13.553 MHz to 13.567 MHz: 26.957 MHz to 27.283 MHz: and 40.66 MHz to 40.70 MHz.
- The compliance levels in the ISM frequency bands between 150 kHz and 80 MHz and in the frequency range 80 MHz to 2,5 GHz are intended to decrease the likelihood that mobile/portable communications equipment could cause interference if it is inadvertently brought into patient areas. For this reason, an additional factor of 10/3 is used in calculating the recommended separation distance for transmitters in these frequency ranges.
- Field strengths from fixed transmitters, such as base stations for radio (cellular/cordless) telephones and land mobile radios, amateur radio, AM and FM radio broadcast and TV broadcast cannot be predicted theoretically with accuracy. To assess the electromagnetic environment due to fixed RF transmitters, an electromagnetic site survey should be considered. If the measured field strength in the location in which the Team3 is used exceeds the applicable RF compliance level above, the Team3 should be observed to verify normal operation. If abnormal performance is observed, additional measures may be necessary, such as reorienting or relocating the Team3.
- Over the frequency range 150kHz to 80kHz, field strengths should be less than 3V/m.

Guidance and Manufacturer's declaration - electromagnetic immunity

The Team3 intended for use in the electromagnetic environment specified below. The customer or the user of the Team3 should assure that it is used in such an environment.

Immunity Test	IEC 60601 test level	Compliance level	Electromagnetic Environment - guidance	
Electrostatic discharge (ESD)	± 6 kV contact	± 6 kV contact	Floors should be wood, concrete or ceramic tile. If floors are covered with	
IEC 61000-4-2	± 8 kV air	± 8 kV air	synthetic material, the relative humidity should be at least 30%.	
Electrical fast transient burst	± 2 kV for power supply lines	± 2 kV for power supply lines	Mains power quality should be that of a typical commercial or hospital environment.	
IEC 61000-4-4	± 1 kV for input/ output lines	± 1 kV for input/ output lines	on worth on the	
Surge IEC 61000-4-5	± 1 kV line(s) to line(s)	± 1 kV line(s) to line(s)	Mains power quality should be that of a typical commercial or hospital environment.	
120 01000-4-3	± 2 kV line(s) to earth	± 2 kV line(s) to earth	environment.	
Voltage dips, short interruptions and voltage variations on power supply input	$<5 \% U_{\rm r}$ (>95 % dip in $U_{\rm r}$) for 0,5 cycles	$<5 \% U_{\rm r}$ (>95 % dip in $U_{\rm r}$) for 0,5 cycles	Mains power quality should be that of a typical commercial of hospital environment. If the user of the Team3 requires continued operation during	
lines IEC 61000-4-11	40 % $U_{\rm r}$ (60 % dip in $U_{\rm r}$) for 5 cycles	40 % $U_{\rm r}$ (60 % dip in $U_{\rm r}$) for 5 cycles	power mains interruptions, it is recommended that the Team3 is powered from an uninterruptible power supply or	
	70 % $U_{\rm r}$ (30 % dip in $U_{\rm r}$) for 25 cycles	70 % $U_{\rm r}$ (30 % dip in $U_{\rm r}$) for 25 cycles	battery, by specifying the battery option at time of purchase.	
	<5 % $U_{\rm r}$ (>95 % dip in $U_{\rm r}$) for 5 s	<5 % $U_{\rm r}$ (>95 % dip in $U_{\rm r}$) for 5 s		
Power frequency (50/60Hz) magnetic field	3 A/m	3 A/m	Power frequency magnetic fields should be at levels characteristic of a typical location in a typical commercial or benefits any incomment.	
IEC 61000-4-8			hospital environment.	
NOTE $U_{\scriptscriptstyle \rm T}$ is the a.c. mains voltage prior to the application of the test level.				

Recommended separation distances between portable and mobile RF communications equipment and the Team3

The Team3 is intended for use in an electromagnetic environment in which radiated RF disturbances are controlled, the customer or user of the Team3 can help prevent electromagnetic interference by maintaining a minimum distance between portable and mobile RF communications equipment (transmitters) and the Team3 as recommended below, according to the maximum output power of the communications equipment.

Rated maximum output power of	Separation distance according to frequency of transmitter m			
transmitter	150kHz to 80MHz	80MHz to 800MHz	800MHz to 2.5GHz	
w	$d = 1.2\sqrt{P}$	$d = 1.2\sqrt{P}$	$d = 2.3\sqrt{P}$	
0.01	0.12	0.12	0.23	
0.1	0.38	0.38	0.73	
1	1.2	1.2	2.3	
10	3.8	3.8	7.3	
100	12	12	23	

For transmitters rated at a maximum output power not listed above, the recommended separation distance d in metres (m) can be estimated using the equation applicable to the frequency of the transmitter, where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer. NOTE 1 At 80MHz and 800MHz, the separation distance for the higher frequency range applies. NOTE 2 These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.

Appendix 2 End of Life Disposal



This symbol signifies that this product, including its accessories and consumables is subject to the WEEE (Waste Electrical and Electronic Equipment) regulations and should be disposed of responsibly in accordance with local procedures.

Appendix 3 Manufacturer's Essential Performance Criteria Specification

Below are comprehensive Essential Performance definition tables. The definitions apply to the intrapartum model fitted with all available options which also covers ante-partum functionality. Relevant particular standards provide the source material for the requirements in these tables.

Particular Standards

The following particular standards are referenced:

Standard	Description
IEC 60601-2-37	Ultrasound
IEC 60601-2-30	NIBP
IEC 80601-2-61	SPO2
IEC 60601-2-27*	MECG
IEC 60601-2-49	Multi-parameter

^{*} not applied in full, as this channel is used only to obtain the maternal heat rate, which is used to validate the calculated ultrasound derived fetal heat rate

IEC 60601-2-37 Ultrasound		
EP Requirement	Sub clause detail	
Displayed value error	Free from error of a displayed numerical value which cannot be attributed to a physiological effect and which may alter the diagnosis Free from the display of incorrect numerical values associated with the diagnosis to be performed	
Ultrasound output	Free from the production of unintended or excessive ultrasound output	
Transducer temperature	Free from the production of unintended or excessive TRANSDUCER ASSEMBLY surface temperature	

IEC 60601-2-30 NIBP			
EP Requirement	Sub clause detail		
Error magnitude	Error over full operating environmental conditions is ±3 mmHg or 2% of reading maximum		
Reproducibility	Reproducibility shall be less than 3 mmHg (0,4 kPa).		
Mains power interruption	Mains on/off behaviour – either continue as before or stop with Technical Alarm. Cuff deflation to < 15mm Hg shall be completed in less than 30s, and no result shall be displayed.		
Measurement outside specified range	If measurement result is outside specified range – Technical Alarm produced		
High / low pressure alarms	Medium priority alarms for high and low systolic, diastolic or mean arterial pressure are included.		

IEC 80601-2-61 SPO2		
EP Requirement	Sub clause detail	
Oxygen saturation	SpO2 accuracy is within 4%RMS over range from 70 to 100% Medium priority alarms for low saturation level and high or low heart rate included	
Pulse rate	Pulse rate accuracy is within ± 5 bpm (or ± 2 %)	
Mains power failure	Performance is unaffected, provided unit has not switched off	
Data update period	Less than 30 s (typically 1 s)	
Signal inadequacy indication	If heart rate is static for 25+ seconds or if signal is lost	
Detection of probe and cable extender faults	Display shows/ if cable faults are present	

IEC 60601-2-27 MECG		
EP Requirement	Sub clause detail	
Heart rate range and accuracy	Range is 30 to 200 bpm minimum Accuracy is within 10% or 5 bpm whichever is greater	
Maternal heart rate alarms	Heart rate alarms shall activate within specified delay time	

IEC 60601-2-49 Multi Parameter		
EP Requirement	Sub clause detail	
Display of all monitored physiological parameters and visual alarm signals	Must continue to perform within specification	
Alarm conditions and priority	Alarm functions as defined in IFU section 8. All Alarms are medium priority	
Indication of validity of measurements	SPO2 Technical alarms for static rate or lost signal	

Appendix 4 Ultrasound Safety Considerations

General

Diagnostic ultrasound has been in use for over 35 years with no confirmed adverse effects on patients or instrument operators at the intensities typical of present diagnostic instruments. However, available data are not wholly conclusive, and the possibility remains that biological effects may be identified in the future.

Because fetal tissue could be more sensitive to biological effects by reason of rapid cell division, it is particularly desirable that ultrasound exposure of pregnant subjects be kept to a minimum.

Medical and scientific authorities therefore recommend that ultrasound procedures be performed in accordance with the "ALARA" principle, which states that the energy delivered to the patient should always be kept As Low As Reasonably Achievable.

The transmitted acoustic power of the Sonicaid Team3 fetal monitor is fixed and cannot be adjusted by the operator. Therefore, the user can best observe the ALARA principle by ensuring that each examination is medically indicated and by limiting the duration of the study to the extent appropriate for the clinical objectives.

Acoustic output data for the transducers for use with the Sonicaid Team3 fetal monitors is summarized in the following tables. The values given are based on measurements in water using a calibrated hydrophone and are stated as the estimated de-rated intensities. The de-rated intensity constitutes the most biologically relevant parameter available, since true determinations of the actual absorbed dose in tissue would require invasive measurement techniques. The de-rated intensity is, therefore, calculated mathematically using a de-rating factor consisting of a constant (the assumed attenuation coefficient) and allowing for the frequency of the transducer and the distance from the transducer face to the measurement hydrophone.

The calculated de-rated intensity values for the Sonicaid Team3 fetal monitors compare very favourably with previously reported acoustic safety data for Doppler ultrasound instruments and are appropriate for all clinical applications recommended in this manual.

At present, there is a clear consensus that the benefits to patients of prudent use of diagnostic ultrasound outweigh the risks that may be present. See:

- Report No. 24, National Council on Radiation and Protection biological effects of ultrasound, clinical effects and observations.
- b) Ziskin M.C., in World Policies on the Use of Diagnostic Ultrasound in Obstetrics: The American Institute of Ultrasound Policy and Statement on Safety. Ultrasound in Medicine and Biology 12: 711-714, 1986.

Acoustic Output

The ultrasound transducer used with the Sonicaid Team3 fetal monitors has a single mode of operation, with fixed acoustic output parameters that are not user adjustable.

Acoustic Output Reporting Table for Track 1 - Non-Auto-scanning Mode Sonicaid Team3 Operating Mode: PWD Application(s): Fetal Monitoring МΙ **Acoustic Output** I_{SPTA.3} (mW/cm²) (mW/cm²) Global Maximum Value* 0.013 1.2 (Note 1) 5.8 (Note 1) Associated Pr.3 (MPa) 0.013 Acoustic Wo total (mW) 2.5mW 2.5mW **Parameters** fc (MHz) 1.0 1.0 1.0 2.4 2.4 2.4 Z_{cc} (cm) Beam Dimensions x₋₆ (cm) 0.066 0.066 0.067 0.067 y_6 (cm) 70 PD (µS) 70 PRF (Hz) 3000 3000 Overall EBD (cm2) (all eight crystals) 7.95

Definition of Terms

The de-rated spatial peak temporal average intensity I_{SPTA.3} The de-rated spatial peak pulse average intensity I_{SPPA.3} I_{SATA} The spatial average temporal average intensity

The mechanical index Pr.3

The de-rated peak negative pressure Wo The ultrasonic power

fc The acoustic centre frequency

The axial distance at which the reported parameter is measured

 $\mathbf{Z}_{\mathbf{sp}} \mathbf{Y}_{\underline{\mathbf{6}}} \mathbf{Y}_{\underline{\mathbf{6}}}$ respectively the in-plane (azimuth) and out-of-plane (elevation) -6dB dimensions in the x-y plane where Zsp is found

PĎ Pulse duration PRF Pulse repetition frequency

EBD Entrance beam dimensions for the azimuth and elevation planes

Additional Information

Parameter	Value	Uncertainty
I _{SATA} @ transducer face	0.30 mW/cm2 Note 1	±24%

Note 1: 'In-situ' de-rating of 0.3dB/cm/MHz has been applied in order to de-rated values.

derive

Uncertainties

The reported uncertainties are based on standard uncertainties multiplied by a coverage factor k = 2 providing a level of confidence of approximately 95%.

Acoustic Parameter	Uncertainty	Acoustic Parameter	Uncertainty	
Power	±28%	Intensity	±20%	
Pressure	±10%	Centre Frequency	±10%	

Thermal and mechanical indices are below 1 under all circumstances.

Measurements were made by the National Physical Laboratory, Teddington, Middlesex, UK in accordance with NEMA UD-2.

Appendix 5 Maternal SpO2 Additional Nellcor Clinical Information

Nellcor Theory of Operation

Overview

This chapter explains the theory behind operations of the Nellcor™ Portable SpO₂ Patient Monitoring System.

Theoretical Principles

The monitoring system uses pulse oximetry to measure functional oxygen saturation in the blood. Pulse oximetry works by applying a Nellcor™ sensor to a pulsating arteriolar vascular bed, such as a finger or toe. The sensor contains a dual light source and a photodetector.

Bone, tissue, pigmentation, and venous vessels normally absorb a constant amount of light over time. The arteriolar bed normally pulsates and absorbs variable amounts of light during the pulsations. The ratio of light absorbed is translated into a measurement of functional oxygen saturation (SpO2). Ambient conditions, sensor application, and patient conditions can influence the ability of the monitoring system to accurately measure SpO2.

Pulse oximetry is based on two principles: oxyhemoglobin and deoxyhemoglobin. differ in their absorption of red and infrared light (measured using spectrophotometry), and the volume of arterial blood in tissue (and hence, light absorption by that blood) changes during the pulse (registered using plethysmography).

A monitoring system determines SpO2 by passing red and infrared light into an

arteriolar bed and measuring changes in light absorption during the pulsatile cycle. Red and infrared low-voltage light-emitting diodes (LED) in the sensor serve as light sources; a photo diode serves as the photo detector.

Since oxyhemoglobin and deoxyhemoglobin differ in light absorption, the amount of red and infrared light absorbed by blood is related to hemoglobin oxygen saturation.

The monitoring system uses the pulsatile nature of arterial flow to identify the oxygen saturation of arterial hemoglobin. During systole, a new pulse of arterial blood enters the vascular bed, and blood volume and light absorption increase. During diastole, blood volume and light absorption reach their lowest point. The monitoring system bases its SpO2 measurements on the difference between maximum and minimum absorption (measurements at systole and diastole). By doing so, it focuses on light absorption by pulsatile arterial blood, eliminating the effects of nonpulsatile absorbers such as tissue, bone, and venous blood.

Automatic Calibration

Because light absorption by hemoglobin is wavelength dependent and because the mean wavelength of LEDs varies, a monitoring system must know the mean wavelength of the sensor's red LED to accurately measure SpO2.

During monitoring, the monitoring system's software selects coefficients that are appropriate for the wavelength of that individual sensor's red LED; these coefficients are then used to determine SpO2. Additionally, to compensate for differences in tissue thickness, the light intensity of the sensor's LEDs is adjusted automatically.

Note: During certain automatic calibration functions, the monitoring system may briefly display a flat line on the plethysmographic waveform. This is a normal operation and does not require any user intervention.

Functional Testers and Patient Simulators

Some models of commercially available bench top functional testers and patient simulators can be used to verify the proper functionality of Covidien Nellcor™ monitoring systems, sensors, and cables. Reference the individual testing device's operator's manual for the procedures specific to the model of tester used. While such devices may be useful for verifying that the sensor, cabling, and monitoring system are functional, they are incapable of providing the data required to properly evaluate the accuracy of a system's SpO2 measurements. Fully evaluating the accuracy of the SpO2 measurements requires, at a minimum, accommodating the wavelength characteristics of the sensor and reproducing the complex optical interaction of the sensor and the patient's tissue

These capabilities are beyond the scope of known bench top testers. SpO2 measurement accuracy can only

be evaluated in vivo by comparing monitoring system readings with values traceable to SaO2 measurements obtained from simultaneously sampled arterial blood using a laboratory CO-oximeter.

Many functional testers and patient simulators have been designed to interface with the monitoring system's expected calibration curves and may be suitable for use with monitoring systems and/or sensors. Not all such devices, however, are adapted for use with the OxiMax™ digital calibration system.

While this will not affect use of the simulator for verifying system functionality, displayed SpO2 measurement values may differ from the setting of the test device. For a properly functioning monitoring system, this difference will be reproducible over time and from monitoring system to monitoring system within the performance specifications of the test device.

Unique Technologies Functional versus Fractional Saturation

This monitoring system measures functional saturation where oxygenated hemoglobin is expressed as a percentage of the hemoglobin that can transport oxygen. It does not detect significant amounts of dysfunctional hemoglobin, such as carboxyhemoglobin or methemoglobin. In contrast, hemoximeters such as the IL482, report fractional saturation where oxygenated hemoglobin is expressed as a percentage of all measured hemoglobin, including measured dysfunctional hemoglobins. To compare functional saturation measurements to those from a monitoring system that measures fractional saturation, fractional measurements must be converted using the listed equation.

$$\Phi = \frac{\Phi}{100 - (\eta + \Lambda)} \times 100$$

Φ functional saturation

η %carboxyhemoglobin


Ф

fractional saturation

 Λ %methemoglobin

Measured versus Calculated Saturation

When calculating saturation from a blood gas partial pressure of oxygen (PO2), the calculated value may differ from the SpO2 measurement of a monitoring system. This usually occurs when saturation calculations exclude corrections for the effects of variables such as pH, temperature, the partial pressure of carbon dioxide (PCO2), and 2,3-DPG, that shift the relationship between PO2 and SpO2.

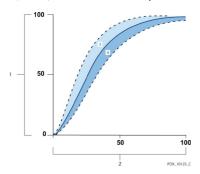

1	% Saturation Axis	
2	PO2 (mmHg) Axis	
3	Increased pH; Decreased temperature, PCO2, and 2,3-DPG	
4	Decreased pH; Increased temperature, PCO2, and 2,3-DPG	

Data Update Period, Data Averaging, and Signal Processing

The advanced signal processing of the OxiMax™ algorithm automatically extends the amount of data required for measuring SpO2 and pulse rate depending on the measurement conditions. The OxiMax™ algorithm automatically extends the dynamic averaging time required beyond seven (7) seconds during degraded or difficult measurement conditions caused by low perfusion, signal artifact, ambient light, electrocautery, other interference, or a combination of these factors, which results in an increase in the dynamic averaging. If the resulting dynamic averaging time exceeds 20 seconds for SpO2, the monitoring system displays the pulse search indicator while continuing to update SpO2 and pulse rate values every second. If the dynamic averaging time exceeds 25 seconds, a low-priority Extended Update alarm also appears.

As such measurement conditions extend, the amount of data required may continue to increase. If the dynamic averaging time reaches 40 seconds, and/or 50 seconds for pulse rate, the monitoring system display a Pulse Timeout alarm and reports a zero saturation indicating a loss-of-pulse condition.

System Features

Nellcor™ Sensor Technology

Use Nellcor™ sensors, which are specifically designed for use with the monitoring system. Identify Nellcor™ sensors by the Nellcor™ logo on the plug. All Nellcor™ sensors contain a memory chip carrying information about the sensor which the monitoring system needs for correct operation, including the sensor's calibration data, model type, troubleshooting codes, and error detection data.

This unique oximetry architecture enables several new features.

Any monitoring system containing OxiMax technology uses calibration data contained in the sensor in calculating the patient's SpO2. With sensor calibration, the accuracy of many sensors is improved, since the calibration coefficients can be tailored to each sensor.

Contact Covidien or a local Covidien representative for a Nellcor™ Oxygen Saturation Accuracy Specification Grid listing all of the sensors used with the monitoring system. Covidien retains a soft copy at www.covidien. com.

Clinical studies report

This appendix contains data from clinical studies conducted for the Nellcor™ sensors used with the Nellcor™ portable SpO2 patient monitoring system.

One (1) prospective, controlled hypoxia clinical study was conducted to demonstrate the accuracy of Nellcor™ sensors when used in conjunction with the Nellcor™ portable SpO2 patient monitoring system. The study was performed with healthy volunteers at a single clinical laboratory. Accuracy was established by comparison to CO-oximetry.

Methods

Data from 11 healthy volunteers were included in the analysis. Sensors were rotated on digits and brow to provide a balanced study design. SpO2 values were continuously recorded from each instrument while inspired oxygen was controlled to produce five steady state plateaus at target saturations of approximately 98, 90, 80, 70 and 60%. Six arterial samples were taken 20 seconds apart at each plateau resulting in a total of approximately 30 samples per subject. Each arterial sample was drawn over two respiratory cycles (approximately 10 seconds) while SpO2 data were simultaneously collected and marked for direct comparison to CO2. Each arterial sample was analyzed by at least two of the three IL CO-oximeters and a mean SaO2 was calculated for each sample. End tidal CO2, respiratory rate, and respiratory pattern were continuously monitored throughout the study.

Study Population

Туре	Class	Total
Gender	Male	5
Gerider	Female	6
	Caucasian	8
Race	Hispanic	2
Race	African American	1
	Asian	0
Age -		19-48
Weight	-	108-250
	Very Light	2
Older minus and	Olive	5
Skin pigment	Dark olive/Medium black	3
	Extremely dark/Blue black	1


Table A-1. Demographic Data

Study Results

Accuracy was calculated using the root mean square difference (RMSD).

SpO2 Decade	MAX-A		MAX-N		MAX-FAST	
Data points A		Arms	Data points	Arms	Data points	Arms
60-70	75	3.05	71	2.89	71	2.22
70-80	55	2.35	55	2.32	55	1.28
80-90	48	1.84	48	1.73	48	1.48
90-100	117	1.23	117	1.68	117	0.98

Table A-2. SpO2 Accuracy for Nellcor™ Sensors vs. CO-oximeters Figure A-1. Modified Bland-Altman Plot

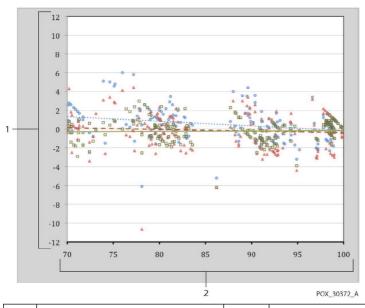

1	Test Sensor; Avg CO-oximeter value 70-100% SpO2	2	Avg CO-oximeter value 70-100% SpO2
	Oximetry board with MAX-A sensor	•••••	Trendline of MAX-A sensor
	Oximetry board with MAX-N sensor	-	Trendline of MAX-N sensor
	Oximetry board with MAX-FAST sensor		Trendline of MAX-FAST sensor

Adverse Events or Deviations

The study was conducted as expected with no adverse events and no deviations from the protocol.

Conclusion

The pooled results indicate that for a saturation range of 60-80% for SpO2, the acceptance criterion was met for the monitoring system when tested with MAX-A, MAX-N and MAX-FAST sensors. The pooled results indicate that for a saturation range of 70-100% for SpO2, the acceptance criterion was met.

Appendix 6 Maternal SpO₂ Additional Masimo Information

6.1 Technical Information

Perfusion Index (Pi)

The Perfusion Index (Pi) is the ratio of the pulsatile blood flow to the non-pulsatile or static blood in peripheral tissue. Pi thus represents a noninvasive measure of peripheral perfusion that can be continuously and noninvasively obtained from a pulse oximeter.

The perfusion index assists clinicians in determining optimal placement of the SpO2 sensor. This parameter is also useful as a troubleshooting tool by helping a clinician rule out whether a questionable value may be due to low perfusion and/or a low signal to noise condition. Clinicians use Pi to quickly identify the optimal site to place the sensor. Higher Pi values reflect stronger pleth signals which facilitate more consistent measurements. An added benefit is that changes in perfusion can be an indicator to the clinician of important changes in the patient's physiological status.

The Pi value from the board is encoded within a data range of 0.000% to 20.000%. It is recommended to round the Pi value to the hundredths place digit for a value of 0.02% to 0.99%, round to the tenths place digit for values between 1% and 9.9% and use whole numbers for values between 10% and 20%.

Sig Bar Graph

Provides an assessment of the confidence in the measurement displayed.

Sensitivity Algorithm

The sensitivity mode setting allows the clinician to adapt the SpO2 measurement sensitivity to the patient's level of SpO2 signal strength and quality at the measurement site. Table 122 below provides an overview of the three distinct sensitivity modes.

Sensitivity Mode	Use Case
Normal	Patients who are experiencing some compromise in blood flow or perfusion. It is advisable for care areas where patients are observed frequently, such as an intensive care unit (ICU).
Adaptive Probe Off Detection (APOD) (Default)	Patients who have a high probability of the sensor becoming detached. It is also the suggested mode for care areas where patients are not visually monitored continuously. This mode delivers enhanced protection against erroneous pulse rate and arterial oxygen saturation readings when a sensor becomes inadvertently detached from a patient due to excessive movement.
Maximum (MAX) Note: Maximum setting will not be persisted between power cycles.	Patients with weak signals (high ambient noise and/or patients with low perfusion) or when a "low perfusion" message displays in APOD or normal mode. It is recommended for use during procedures or when clinician and patient contact is continuous such as in higher acuity settings. It is not recommended for care areas where patients are not monitored visually, such as general wards. Max sensitivity is designed to interpret and display data at the measuring site when the signal may be weak due to decreased perfusion. When a sensor becomes detached from a patient, it will have compromised protection against erroneous pulse rate and arterial saturation readings.

Averaging Time

Length of time over which the system calculates the average of all data points, can be: 2-4, 4-6, 8, 10, 12, 14, or 16 seconds (default 8S).

Masimo Technical Alarms

Technical Alarms indicate an issue with the SpO2 sensor which is either effecting or preventing a measurement being made. Technical alarms fall into two Categories:

- Blocking Technical Alarms
- · Informative Technical Alarms

Blocking Technical Alarms

Alarms where the SpO2 probe is unusable and measurements cannot be made.

- · The Technical Alarm will sound
- Blocked Icons will flash alternately with the Alarm Reason in the MPR and SpO2 windows
- The Alarm Indicator Icon and Alarm reason will flash
 Blue
- The Alarm can be cancelled by pressing the Alarm lcon
- Once Cancelled both Blocked Icons will remain on screen
- Pressing on Blocked Icon will show the Blocked Reason
- Blocking technical alarms are defined in Appendix 6
 User Alarms and Messages

The example shown is for No Sensor Connected in Numeric View.



If the Alarm is cancelled, the flashing sequence will stop and the blocked Icons will remain.

Informative Technical Alarms

Alarms where the reading may be compromised unless action is taken. Readings are still presented on the diagnostics screen whilst the alarm is active.

- · The Technical Alarm will sound
- SpO2 and MPR Readings will flash alternately with the Alarm Reason
- The Alarm Indicator Icon and Alarm reason will flash Blue
- The Alarm can be cancelled by pressing the Alarm lcon
- Informative technical alarms are defined in Appendix 6 User Alarms and Messages

The example shown is for Too Much Ambient Light in Numeric View



Informative User Messages

Informative user messages provide feedback to the user for messages which may assist with device usage.

- The Message will alternate between MSpO2 and MPR and the current reading
- Informative messages will be the same color as the SpO2 area (orange)
- Informative messages are defined in Appendix 6 User Alarms and Messages.

The example shown is for Pulse Search in Numeric View.



Sensor or Cable Expiry

The Masimo protocol indicates if certain sensors/cables are either Near expiry or expired. Expiry can be one of the following:

- Near Expiration given well in advance of an item expiring, the item can still be used
 - Unit Idle
 - Unit Recording/Printing
- Expired The item will have to be replaced
 - Sensor On Patient
 - Sensor Off Patient

Near Expiration

- If a "Near expiration" message is received the "Near expiration" window (opposite) will be displayed under the following conditions:
 - Unit Idle Message will be displayed
 - Unit recording and/or Printing –
 Message will not be displayed (the
 message will be displayed once
 recording/printing has ended).

Near Expiration messages and associated items are defined in Appendix 6 User Alarms and Messages

The example shown is for Sensor Near expiration

Expired - with MSpO2 Sensor On Patient

- If the expiry message is received with the finger inserted the monitoring session will continue and an "Informative User Message" will be displayed, it will alternate with the current reading.
- This will allow the current measuring session to continue.

Near Expiration messages and associated items are defined in Appendix 6 User Alarms and Messages

The example shown is for Sensor expired in Numeric View.

Patient name, 10 & gestational age ULT (1) bpm ULT (2) bpm ULT (2) bpm ULT (2) bpm TOCO (4 MSp02 '4 MPR bpm NEP medig Sensor 65 (--) Expired O V -- ++ SP Expired

Expired - with MSpO2 Sensor Off Patient

- If the expiry message is received with the finger NOT inserted a Blocking Technical Alarm will be displayed, the message will alternate with the blocked Icon.
- This will Block any further use of this sensor.
- This alarm can be cancelled in which case both SpO2 and MPR windows will show the Blocked Icon.
- As with other Blocking alarms, if one of the Blocked Icons is pressed after the alarm has been cancelled the blocked reason will be displayed.

Near Expiration messages and associated items are defined in Appendix 6 User Alarms and Messages

The example shown is for Sensor expired.





Sensor Off Patient

The following scenarios are supported: Expiry can be one of the following:

- Sensor either removed or falls off patient
 - Scenario 1 Before valid SpO2 Data has been received
 - Scenario 2 After valid SpO2 Data has been received

Scenario 1 – Before valid SpO2 Data has been received

- The message "Sensor Off Patient" will be displayed as an "informative user message" i.e. there will be no alarm
- The Message will alternate between MSpO2 and MPR.



Scenario 2 – After valid SpO2 Data has been received

- The message "Sensor Off Patient" will be displayed as an "informative technical alarm".
- The Message will alternate between MSpO2 and MPR.



User Alarms and Messages

The following table lists the Masimo Alarms/Messages against the corresponding Alarm/Message Category:

Category	Message/Alarm	
Blocking Technical Alarms	Cable Expired (with Sensor Off Patient, No Sensor Connected, or No Adhesive Sensor) (Replace Cable) Incompatible Cable Defective Cable (Replace Cable) Sensor Expired (with Sensor Off Patient or No Adhesive Sensor) (Replace Sensor)	Cable Expired (without Sensor Off Patient, No Sensor Connected, or No Adhesive Sensor) Unrecognized Cable (Replace Cable) No Sensor Connected Sensor Expired (without Sensor Off Patient or No Adhesive Sensor) Unrecognized Sensor
	Incompatible Sensor Defective Sensor Adhesive Sensor Expired (with Sensor Off Patient) (Replace Adhesive Sensor) Incompatible Adhesive Sensor Unrecognized Adhesive Sensor (Replace Adhesive Sensor) Check Sensor Connection	 Check Cable and Sensor Fault No Adhesive Sensor (No Adhesive Sensor Connected) Adhesive Sensor Expired (without Sensor Off Patient) (Replace Adhesive Sensor Next Patient) Defective Adhesive Sensor (Replace Adhesive Sensor)

Informative User Messages	Low Signal IQ Sensor Initializing Pulse Search	 Interference Detected Low Perfusion Index Low Sensor Battery
Informative Technical Alarms	Too Much Ambient Light	Sensor Off Patient
No MspO2 Connected	No Cable Connected	
Near Expiration	Cable Near Expiration Adhering Consort Near Expiration	Sensor Near Expiration
	Adhesive Sensor Near Expiration	
Not Applicable	Demo Mode	SpO2 Only Mode

6.2 Clinical Information

Sp02 General Description

Pulse oximetry is a continuous and non-invasive method of measuring the level of arterial oxygen saturation in blood. The measurement is taken by placing a sensor on a patient, usually on the fingertip for adults, and the hand or foot for neonates. The sensor is connected to the pulse oximetry instrument with a patient cable. The sensor collects signal data from the patient and sends it to the instrument. The instrument displays the calculated data in two ways: I) as a percent value for arterial oxygen saturation (Sp02), and, 2) as a pulse rate (PR).

General: The pulse oximeter is to be operated by, or under the supervision of, qualified personnel only. The manual, accessories, directions for use, all precautionary information, and specifications should be read before use.

Technologies

Masimo Signal Extraction Technology (SET®)

Masimo Signal Extraction Technology's signal processing differs from that of conventional pulse oximeters. Conventional pulse oximeters assume that arterial blood is the only blood moving (pulsating) in the measurement site. During patient motion, however, the venous blood also moves, causing conventional pulse oximeters to read low values, because they cannot distinguish between the arterial and venous blood movement (sometimes referred to as noise).

Masimo SET® pulse oximetry utilizes parallel engines and adaptive filtering. Adaptive filters are powerful because they are able to adapt to the varying physiologic signals and/or noise and separate them by looking at the whole signal and breaking it down to its fundamental components. The Masimo SET® signal processing algorithm, Discrete Saturation Transform® (DST®), in parallel with Fast Saturation Transform (FST®), reliably identifies the noise, isolates it and, using adaptive filters, cancels it. It then reports the true arterial oxygen saturation for display on the monitor.

Principles of Operation

Pulse oximetry is governed by the following principles:

Oxyhemoglobin (oxygenated blood), deoxyhemoglobin (non-oxygenated blood), carboxyhemoglobin (blood with carbon monoxide content), and methemoglobin (blood with oxidized hemoglobin content) species differ in their absorption of visible and infrared light.

The amount of arterial blood in tissue changes with your pulse (photoplethysography). Therefore, the amount of light absorbed by the varying quantities of arterial blood changes as well.

SPO2 General Warnings and Notes



WARNING: Inaccurate SpO2 readings may be caused by:

- · Improper sensor application and placement
- Elevated levels of COHb or MetHb: High levels of COHb or MetHb may occur with a seemingly normal SpO2. When elevated levels of COHb or MetHb are suspected, laboratory analysis (CO-Oximetry) of a blood sample should be performed.
- · Elevated levels of bilirubin
- · Elevated levels of dyshemoglobin
- · Vasospastic disease, such as Raynaud's, and peripheral vascular disease
- Hemoglobinopathies and synthesis disorders such as thalassemias, Hb s, Hb c, sickle cell, etc.
- · Hypocapnic or hypercapnic conditions
- · Severe anemia
- · Very low arterial perfusion
- · Extreme motion artefact
- Abnormal venous pulsation or venous constriction
- · Severe vasoconstriction or hypothermia
- Arterial catheters and intra-aortic balloon
- · Intravascular dyes, such as indocyanine green or methylene blue
- · Externally applied coloring and texture, such as nail polish, acrylic nails, glitter, etc.
- Birthmark(s), tattoos, skin discolorations, moisture on skin, deformed or abnormal fingers.
 etc.
- · Skin color disorders



WARNING

- Do not adjust, repair, open, disassemble, or modify the pulse oximeter or accessories.
 Injury to personnel or equipment damage could occur. Return the pulse oximeter for servicing if necessary.
- Do not place the pulse oximeter on electrical equipment that may affect the device, preventing it from working properly.
- Interfering Substances: Dyes or any substance containing dyes that change usual blood pigmentation may cause erroneous readings.
- The Fetal monitor is not an apnea monitor.
- The pulse oximeter should not be used for arrhythmia analysis.
- SpO2 is empirically calibrated in healthy adult volunteers with normal levels of carboxyhemoglobin (COHb) and methemoglobin (MetHb).
- If SpO2 values indicate hypoxemia, a laboratory blood sample should be taken to confirm the patient's condition.
- If the Low Perfusion message is frequently displayed, find a better perfused monitoring site. In the interim, assess the patient and, if indicated, verify oxygenation status through other means.
- Change the application site or replace the sensor and/or patient cable when a "Replace sensor" and/or "Replace patient cable", or a persistent poor signal quality message (such as "Low SIQ") is displayed on the host monitor. These messages may indicate that patient monitoring time is exhausted on the patient cable or sensor.
- To ensure that alarm limits are appropriate for the patient being monitored, check the limits each time the pulse oximeter is used.
- Replace the cable or sensor when a replace sensor or when a low SIQ message is consistently displayed while monitoring consecutive patients after completing troubleshooting steps listed in this manual.



WARNING

- Variation in measurements may be profound and may be affected by sampling technique as well as the patient's physiological conditions. Any results exhibiting inconsistency with the patient's clinical status should be repeated and/or supplemented with additional test data. Blood samples should be analyzed by laboratory instruments prior to clinical decision making to completely understand the patient's condition.
- To protect from electric shock, always remove the sensor and completely disconnect the
 pulse oximeter before bathing the patient.

Notes:

- A functional tester cannot be used to assess the accuracy of the pulse oximeter.
- High-intensity extreme lights (such as pulsating strobe lights) directed on the sensor, may not allow the pulse oximeter to obtain vital sign readings.
- When using the Maximum Sensitivity setting, performance of the "Sensor Off" detection may be
 compromised. If the device is in this setting and the sensor becomes dislodged from the patient,
 the potential for false readings may occur due to environmental "noise" such as light, vibration,
 and excessive air movement.
- Additional information specific to the Masimo sensors compatible with the pulse oximeter, including information about parameter/measurement performance during motion and low perfusion, may be found in the sensor's directions for use (DFU).
- Cables and sensors are provided with X-Cal technology to minimize the risk of inaccurate readings and unanticipated loss of patient monitoring. Refer to the Cable or Sensor DFU for the specified duration of the patient monitoring time.

Specifications

Opecifications					
Saturation (% Sp02)	1-100%				
Pulse rate range	20-240 bpm				
Perfusion	0.02% - 20%				
Saturation	Adults, Pediatrics: Neonates:				
Accuracy (% Sp02)	• 100%: ±2 digits • 100%: ±3 digits				
- During No Motion Conditions	0-69%:unspecified 0-69%: unspecified				
Saturation	Adults, Pediatrics: Neonates:				
Accuracy (% Sp02)	• 100%: ±3 digits • 100%: ±2 digits				
- During Motion Conditions	0-69%:unspecified 0-69%: unspecified				
Pulse Rate (bpm) - During No Motion Conditions	Adults, Pediatrics, Neonates: 25 to 240 ± 3 digits				
Pulse Rate (bpm) - During Motion Conditions	Adults, Pediatrics, Neonates: 25 to 240 ± 5 digits				
Resolution	Saturation (% Sp02) Pulse Rate (bpm)				
Low Perfusion Performance	> 0.02% Pulse Amplitude Saturation (% Sp02) ± 2 digits % Transmission > 5% Pulse Rate ± 3 digits				

Patient Cables

The table below provides basic specifications of compatible Masimo LNOP, RD, LNC, and M-LNC patient cables, adapters, and extensions.

Part Number	Receptacle or Part Description	Sensor Interface	Model Description	Length	GTIN (Global Trade Item Number)
4080	14 pin Mini-D	RD	RD SET MD14-05	5 ft.	00843997009751

RD SET Sensors (for use with compatible RD patient cable)

The table below provides basic specifications of compatible Masimo LNOP, RD, LNC, and M-LNC patient cables, adapters, and extensions.

RDSET Reusable				SpO2 A	ccuracy	PR Accı (bpm)	ıracy	Low Perfus Accura (No Mo	су			
P/N	Sensor	Desc- ription	GTIN	Application Site	510K	Weight Range (kg)	No Motion	Motion	No Motion	Motion	SpO2 (%)	PR (bpm)
4050	DCI	Adult Finger	00843- 99700- 9843	Finger or Toe	K180046	> 30	± 2	± 3	±3	± 5	± 2	± 3

Radiant Power of Light for LNOP, RD SET, LNCS, and M-LNCS Sensors

Radiant Power at 50 mA pulsed
□ □ 15mW

Nominal Wavelengths

Masimo oximetry sensors use light emitting diodes (LED's) which operate at the following wavelengths (except TC-I, TF-I, and TFA-1 sensor types as specified in their respective columns below.)

LED	General	TC-I	TF-I	TFA-1
	Nominal Wavelength	Nominal Wavelength	Nominal Wavelength	Nominal Wavelength
Red	660 nm	653 nm	660 nm	653 nm
Infrared	905 nm	880 nm	880 nm	905 nm

5 Non-Medical Device Accessories (Masimo Testers)§

The following testers can be used to verify the general functionality of Masimo devices or devices containing Masimo SET pulse oximetry. Refer to the tables below for various testers and their test parameter specifications.

Oximeter Testers

The Masimo Tester is used to verify the general functionality of Masimo devices or devices containing Masimo SET® pulse oximetry. The Tester is available in configurations which allow a connection to Masimo SET devices as well as connections via Masimo patient cables.

		Test Parameter Specifications		
Tester PN	Connector Type	SpO2 (%)	Pulse Rate (bpm)	
1593	Direct Connect (14-Pin)	81 ± 3	61 ± 1	
2367	LNCS (9-Pin)			
4249	RD			

Compatibility

- The Masimo SET technology has been validated for low perfusion accuracy in bench top testing against a Biotek Index 2[™] simulator and Masimo's simulator with signal strengths of greater than 0.02% and transmission of greater than 5% for saturations ranging from 70 to 100%. This variation equals ±1 standard deviation. Plus or minus one standard deviation encompasses 68% of the population.
- The Masimo SET Technology with Masimo Neo sensors has been validated for neonatal motion accuracy in human blood studies on healthy adult male and female volunteers with light to dark skin pigmentation in induced hypoxia studies while performing rubbing and tapping motions, at 2 to 4 Hz at an amplitude of 1 to 2 cm and a non-repetitive motion between 1 to 5 Hz at an amplitude of 2 to 3 cm in induced hypoxia studies in the range of 70-100% SpO2 against a laboratory CO-Oximeter and ECG monitor. This variation equals ±1 standard deviation. Plus or minus one standard deviation encompasses 68% of the population. 1% has been added to the results to account for the effects of fetal hemoglobin present in neonates.
- The Masimo SET technology with Masimo sensors has been validated for pulse rate accuracy for the range of 25 -240 bpm in bench top testing against a Biotek Index 2[™] simulator. This variation equals ±1 standard deviation. Plus or minus one standard deviation encompasses 68% of the population.
- See sensor directions for use (DFU) for complete application information. Unless otherwise indicated, reposition reusable sensors at least every 4 hours and adhesive sensors at least every 8 hours.
- The TC-I sensor is contraindicated for patients with pierced ears at the measuring site.
- The TF-I sensor must be removed and repositioned to a different monitoring site at least every 2 hours. If extended monitoring is required, use of a single patient adhesive digit sensor is recommended.
 The TF-I, TC-I, and DBI sensors were not validated under motion conditions.
- The Trauma and Newborn sensors are for use only with instruments containing Masimo SET oximetry (Version 4.1.0.1 or higher) or monitors licensed to use specialty sensors.
- Sensor accuracy specified when used with Masimo technology using a Masimo patient cable for LNOP sensors, RD SET sensors, the LNCS sensors, or the M-LNCS sensors. Numbers represent Arms (RMS error compared to the reference). Because pulse oximeter measurements are statistically distributed, only about two-thirds of the measurements can be expected to fall within a range of ± Arms compared to the reference value. Unless otherwise noted, SpO2 accuracy is specified from 70% to 100%. Pulse Rate accuracy is specified from 25 to 240 bpm.
- Masimo M-LNCS, LNOP, RD, and LNCS sensors, cables, and adapters have the same optical and electrical properties and may differ only in application type (adhesive/non-adhesive/hook & loop), cable lengths, optical component locations (top or bottom of sensor as aligned with cable), adhesive material type/size, and connector type (LNOP 8 pin modular plug, RD 15 pin modular plug, LNCS 9 pin, cable based, and M-LNCS 15 pin, cable based). All sensor accuracy information and sensor application instructions are provided with the associated sensor directions for use.
- For M-LNCS Blue, LNOP Blue is the predicate. Masimo SET technology with LNOP Blue sensors have been validated for no motion accuracy in human blood studies on neonatal, infant and pediatric patients with congenital cyanotic cardiac lesions in the range of 60%-100% SpO2 against a laboratory co-oximeter. This variation equals plus or minus one standard deviation, which encompasses 68% of the population.
- The presented 510(k) reference is based on the specific FDA clearance for the specific Masimo technology board cleared with the compatible Masimo sensor. The 510(k) reference may vary for the Masimo sensor depending on the pulse oximetry technology (i.e. Masimo SET, Masimo rainbow SET, Philips FAST, Nellcor).
- Masimo accessories are designed and verified by Masimo to be compatible for use with Masimo technology integrated into OEM devices. Please refer to the OEM device manufacturer for a list of Masimo accessories and features/parameters which are currently available for use with the OEM device.

6.3 TRADEMARKS, LEGENDS AND LOGOS

Grant by Masimo. Masimo hereby grants to Huntleigh a non-exclusive license to use the Masimo Licensed Trademarks with the Licensed Devices for identification purposes and for publicity and promotional purposes when it is advertising Licensed Devices.

No Implied License; Non-Authorized Accessories. Huntleigh agrees to include the following legend on the exterior of Licensed Devices:

"NO IMPLIED LICENSE: Possession of this device does not convey any express or implied license to use the device with unauthorized sensors or cables that would, alone, or in combination with this device, fall within the scope of one or more of the patents relating to this device."

"NON-AUTHORIZED ACCESSORIES: Masimo technology is designed to operate together with Masimo cables, sensors and accessories as an integrated system. When any component of the system is compromised, erroneous measurements can occur. Accordingly, the use of unauthorized sensors or accessories, such as third-party reprocessed or copycat sensors can yield unreliable results when used with a Masimo device. The performance of Masimo technology is not validated when used with any unauthorized sensor or accessory."

6.4 END-USER LICENSE AGREEMENT

THIS DOCUMENT IS A LEGAL AGREEMENT BETWEEN YOU ("PURCHASER") AND HUNTLEIGH. IF YOU DO NOT AGREE TO THE TERMS OF THIS AGREEMENT, PROMPTLY RETURN THE ENTIRE PACKAGE, INCLUDING ALL ACCESSORIES, IN THEIR ORIGINAL PACKAGE, WITH YOUR SALES RECEIPT TO HUNTLEIGH FOR A FULL REFUND.

- a. Grant of License. In consideration of payment of the license fee, which is part of the price paid for this product, Huntleigh grants to Purchaser a nonexclusive, nontransferable license, without right to sublicense, to use the copy of the incorporated software/firmware, and documentation in connection with Purchaser's use of Masimo products for their labeled purpose. Huntleigh reserves all rights not expressly granted to Purchaser.
- b. Ownership of Software/Firmware. Title to, ownership of, and all rights and interests in, any Masimo software and/or firmware and the documentation, and all copies thereof, remain at all times vested in Masimo Corporation, licensor to Huntleigh, and they do not pass to Purchaser.
- c. Assignment. Purchaser shall not assign or transfer this License, in whole or in part, by operation of law or otherwise, without Huntleigh's prior written consent; any attempt without such consent, to assign any rights, duties or obligations arising hereunder shall be void.
- d. Copy Restrictions. The software/firmware, mask works, circuit board layouts, and accompanying written materials are copyrighted. Unauthorized copying of the software, including software that has been modified, merged, or included with other software, or other written materials is expressly forbidden. You may be held legally responsible for any copyright infringement that is cause or incurred by your failure to abide by the terms of this license. Nothing in this license provides any rights beyond those provided by 17 U.S.C. §117.
- e. Use Restriction. As the Purchaser, you may physically transfer the products from one location to another provided that the software/firmware is not copied. You may not electronically transfer the software/firmware from the products to any other device. You may not disclose, publish, translate, release distribute copies of, modify, adapt, translate, reverse engineer, decompile, disassemble, or create derivative works based on the Masimo product, the software/firmware, or the written materials without the prior written consent of Masimo. Masimo sensors that are designated for single use are licensed under Masimo patents for use on a single patient only, and are not sold. Possession of a Masimo device does not convey any express or implied license to use the device with unauthorized sensors or cables that would, alone, or in combination with this device, fall within the scope of one or more of the patents relating to the device. There is no license, implied or otherwise, that would allow use of single use Masimo Sensors beyond their intended single use. After use of single use Masimo sensors, there is no further license granted by Masimo to use the sensors and they must be discarded.
- f. Non-Authorized Accessories. Masimo technology is designed to operate together with Masimo devices, cables, sensors, and accessories as an integrated system. When any component of the system is compromised, erroneous measurements can occur. Accordingly, the use of unauthorized cables, sensors, or accessories, such as third-party reprocessed or copycat sensors, can yield unreliable results when used with a Masimo device. The performance of Masimo technology is not validated when used with any unauthorized cable, sensor, or accessory.
- g. Transfer Restrictions. The software/firmware is licensed to the Purchaser and may not be transferred to anyone, except other end-users, without the prior written consent of Huntleigh. In no event may you transfer, assign, rent, lease, sell, or otherwise dispose of the software/firmware or the products on a temporary basis.
- h. Beneficiary. Masimo Corporation is a Beneficiary of this Agreement and has the right to enforce its provisions.
- U.S. Government Rights: If you are acquiring software (including the related documentation) on behalf of any part of the United States Government, the following provisions apply: the software is deemed to be "commercial software" and "commercial computer software documentation," respectively pursuant to DFAR Section 227.7202 FAR 12.212, as applicable. Any use, modification, reproduction, release, performance, display or disclosure of the software (including the related documentation) by the U.S. Government or any of its agencies shall be governed solely by the terms of this Agreement and shall be prohibited except to the extent expressly permitted by the terms of this agreement.

Appendix 7 Sonicaid Wireless Telemetry



Please refer to the IFU supplied with the Sonicaid Freedom for detailed instructions on the use, care and maintenance before connecting and using the equipment.



Connecting the Sonicaid Freedom telemetry unit

- If Sonicaid Freedom is mounted on the Team3 trolley, the aerial must be mounted on Team3 using the SF1
 Freedom Antenna Fixing Kit. Full instructions are provided with the kit. Contact your local sales
 representative for details.
 - If it is not mounted on the Team3 trolley, ensure the Sonicaid Freedom is securely located on a suitable flat surface and connect the aerial directly to the Sonicaid Freedom rear panel socket, ensuring it is kept vertical during use.
- 2. Connect the power cable from a suitable wall socket to the mains connector on the rear panel.
- 3. Plug the end of the data cable labelled Freedom into the 15-way 'D' socket on the rear panel.
- 4. Plug the other end of the cable labelled CTG into the 15-way 'D' socket on the rear panel of the Team3.
 - WIRELESS +>
- 5. Before operating, ensure the transducers are plugged in and fully charged (takes 3 to 4 hours).

Using the telemetry unit

- 1. Switch on the telemetry unit.
- 2. Check that the transmitter is fully charged.
- 3. Examine the mother, and establish the best position for the transducers.
- 4. Attach the transducers securely to the mother.

Note

When the wireless transducers are undocked from the receiving station, a symbol will be shown on the ULT1/TOCO channel to indicate wireless monitoring.



To disable wireless operation and return to wired transducer monitoring, dock the wireless transducer back into the receiver charging bays.

You will need to view the Version screen (See 15.5 Secure Settings) to determine if you can use SpO2 and wireless transducers at the same time on your Team3. Mainboard versions less than 5 cannot support concurrent use of Freedom and SpO2.



To prevent equipment damage and possible personal injury, do not position the receiver on top of the Team3. A trolley mounting bracket is available to mount the telemetry unit on the Team3 trolley.

Appendix 8 Sonicaid Wireless Transducer System



Please refer to the IFU supplied with the Sonicaid Wireless Transducer System for detailed instructions on the use, care and maintenance before connecting and using the equipment.



Connecting the Sonicaid Wireless Transducer System

- 1. FTS-3 should be placed on a flat surface. Alternatively, it can be installed on a Huntleigh approved trolley.
- 2. Connect the power cable from a suitable wall socket to the mains connector on the rear panel.
- 3. Plug the end of the interface cable supplied into the 15-way 'D' socket on the rear panel.
- 4. Plug the other end of the interface cable supplied into the 15-way 'D' socket on the rear panel of the Team3.
- 5. Before operating, ensure the wireless transducers are docked into the docking slot and fully charged.

Battery indicator	Status
	Full charging icon: fully charged.
	Increasing charging icon: charging
	No charging icon: the transducer is not placed in the docking slot correctly.
ERROR	If the screen displays ERROR, it indicates that the transducer is not connected well or you have placed a transducer from another system by mistake.

Using the Sonicaid wireless transducer system

- 1. Switch on the Sonicaid wireless transducer system.
- Check that the wireless transducers are fully charged.
- 3. Examine the mother, and establish the best position for the transducers.
- 4. Take out the transducer from the docking slot of the base station and it will power on automatically.
- The wireless connection indicator is on, and it indicates the transducer is taken out.



6. Place the transducers on the patient.

Note

- A complete charging process takes approximately 3.5 hours.
- · The transducer screen displays the signal strength, battery level and working channel.
- After the wireless transducer is successfully connected to the base station, it will also display the transducer type. All the indicators are green.
- · If the transducer is not successfully connected, it will power off automatically.
- · If you want to power off the transducer, put it back in the docking slot.
- If the transducer connects to the base station successfully, the wireless connection indicator, (see 5 above), is always on. Do not put back the inactivated transducer in the docking slot.
- The US-T transducer taken up first displays US1 on the screen, and the one taken up later displays US2. Please do not take two US transducers simultaneously, wait 2 seconds to take the other one. Restart the transducers if you take up two US-T transducers at the same time by mistake.
- Apply coupling gel to the US-T transducer before use and move the transducer to get the desired fetal heart and belt it to the belly.
- Underwater monitoring requires less coupling gel or no coupling gel. The TOCO-T transducer and TOCO-E transducer can be applied to the belly directly without coupling gel.
- The TOCO-E transducer monitors DECG or MECG/MPR only when it is connected with the DECG or MECG cable. If the TOCO-E transducer is not connected with the DECG or MECG cable, it will only monitor uterine activity. The DECG cable and the MECG cable cannot be connected to the TOCO-E transducer at the same time.
- When using the TOCO-E transducer to monitor DECG or MECG/MPR, it is recommended that
 the DECG cable or the MECG cable be kept straight to avoid damage to the TOCO-E transducer's
 interface caused by twisted cable.
- To disable wireless operation and return to wired transducer monitoring, dock the wireless transducers back into the docking slots in the base station.

Ending Monitoring


Once monitoring is complete and the wireless transducers and base station have been cleaned, dock the wireless transducers into the docking slots in the base station, so they are easily located when you want to use the system again, and so the transducer batteries can be charged.

Appendix 9 Additional Unimed Soft Tip U4105-06 Information

Table A-3. Unimed Soft Clip U4105-06 Demographic Data Subject Pool

No.	Gender	Age	Pigmentation Score	Ethnicity	Height (cm)	Weight (kg)
1	Male	23	Medium	Asian	178	65
2	Male	37	Dark	African	180	86
3	Male	46	Light	Caucasian	170	65
4	Male	30	Dark	African	175	68
5	Male	36	Dark	African	172	86
6	Male	21	Medium	Asian	172	70
7	Female	23	Medium	Asian	153	60
8	Female	25	Medium	Asian	154	50
9	Male	25	Medium	Asian	173	68
10	Female	24	Medium	Asian	160	52
11	Female	23	Medium	Asian	163	53
12	Female	23	Medium	Asian	163	55

Figure A-2. Modified Bland-Altman Plot

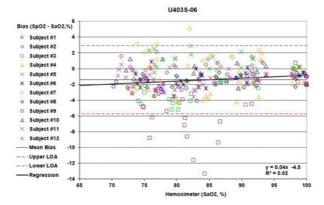

This section is only applicable to United Kingdom (UK) market when UK marking is applied to the Arjo medical device labelling.

UK Symbol:



UK marking indicating conformity with UK Medical Devices Regulations 2002 (SI 2002 No 618, as amended) Figures indicate UK Approval Body supervision.

UK Responsible Person & UK Importer:

Arjo (UK) Ltd., ArjoHuntleigh House, Houghton Regis. LU5 5XF

Is the appointed UK Responsible Person as defined in UK Medical Devices Regulations 2002 (SI 2002 No 618, as amended).

For Northern Ireland (NI) CE marking will still apply until further amendment to applicable regulations.

1001071-2

Sonicaid and Huntleigh are registered trademarks of Huntleigh Technology Ltd. 2016.

If a serious incident occurs in relation to this medical device, affecting the user, or the patient then the user or patient should report the serious incident to the medical device manufacturer or the distributor. In the European Union, the user should also report the serious incident to the Competent Authority in the member state where they are located.

Manufactured in the UK by Huntleigh Healthcare Ltd on behalf of;



ArjoHuntleigh AB Hans Michelsensgatan 10 211 20 Malmö, Sweden **(**E

Huntleigh Healthcare Ltd.

35 Portmanmoor Road, Cardiff, CF24 5HN, United Kingdom T: +44 (0)29 20485885 sales@huntleigh-diagnostics.co.uk www.huntleigh-diagnostics.com

Registered No: 942245 England & Wales. Registered Office: ArjoHuntleigh House, Houghton Hall Business Park, Houghton Regis, Bedfordshire, LU5 5XF @Huntleigh Healthcare Limited 2016

A Member of the Arjo Family

As our policy is one of continuous improvement, we reserve the right to modify designs without prior notice.





www.huntleigh-healthcare.us/

1001048-4